



**MOTOROLA**

User's Guide



**DIGITAL WIRELESS TELEPHONE**


**120c CDMA  
SJN9780A**

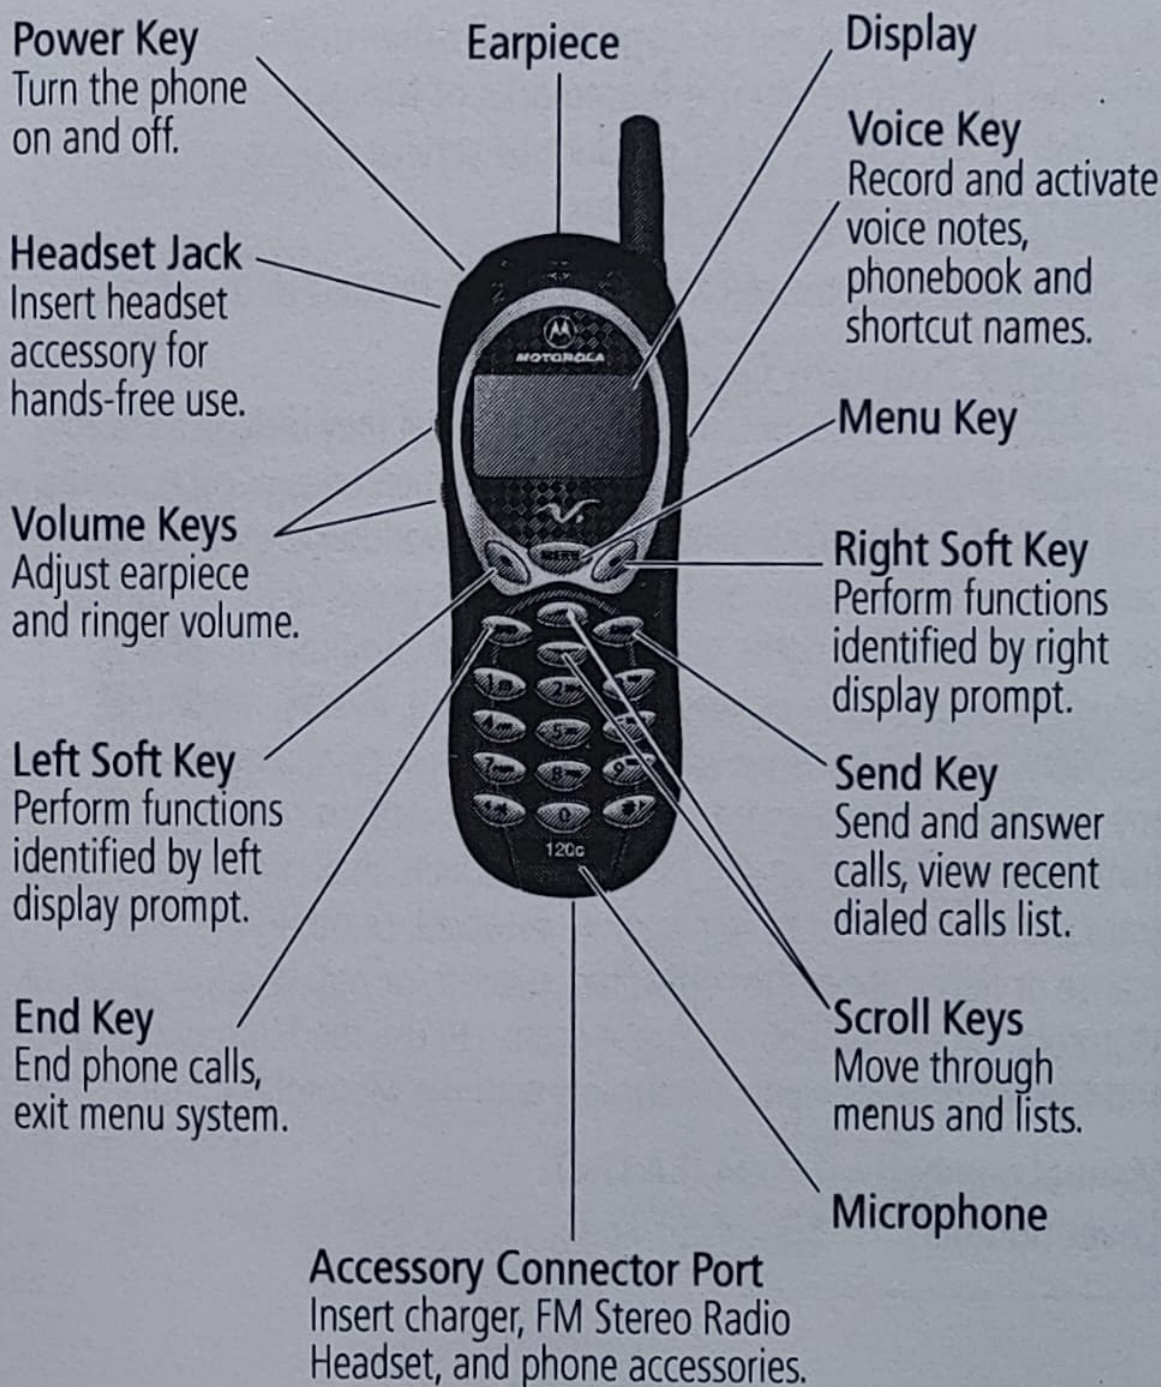




# Welcome

---

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola  Series 120c wireless phone to keep you connected with ease.





Personal Communications Sector  
600 North U.S. Highway 45  
Libertyville, Illinois 60048

1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)

[www.motorola.com](http://www.motorola.com)

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.

© 2001 Motorola, Inc. All rights reserved. Printed in the U.S.A.

### **Computer Program Copyrights**

The Motorola products described in this manual may include Motorola computer programs stored in semiconductor memories or other media that are copyrighted with all rights reserved worldwide to Motorola. Laws in the United States and other countries preserve for Motorola, Inc. certain exclusive rights to the copyrighted computer programs, including the exclusive right to copy, reproduce, modify, decompile, disassemble, and reverse-engineer the Motorola computer programs in any manner or form without Motorola's prior written consent. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license or rights under the copyrights, patents, or patent applications of Motorola, except for a nonexclusive license to use the Motorola product and the Motorola computer programs with the Motorola product.

Manual number: 6809435A47-O  
Cover number: 8988485L07-O

# Menu Map

## Main Menu

- **Recent Calls**

- Received Calls
- Dialed Calls
- Notepad
- Call Times

- **Phonebook**

- **Quick Dial**

- **Radio**

- **Messages**

- Voicemail
- Text Msgs
- Browser Alerts
- Quick Notes
- Outbox
- Drafts

- **Shortcuts**

- **Voice Notes**

- **Browser**

- **Settings**

(see next page)

**Note:** This is the standard phone menu layout. You or your service provider may have changed the menu layout or changed some feature names. Not all features may be available for all users.

For example, the **Radio** feature on the main menu (left) is displayed only when the FM Stereo Radio Headset accessory is plugged into the accessory connector port on your phone (see phone illustration, page 1).

For a description of the standard menu features, see pages 43 to 54.

### Shortcuts

Change display zoom:

Press **MENU**, then  
press and hold **MENU**

Lock/unlock keypad:

Press **MENU** **\*#**

Display my phone number:

Press **MENU** **#**

Go to dialed calls list:

Press **SND**



# Settings Menu

- **Ring/Vibrate**

- Alert
- *Alert Detail*

- **Phone Status**

- My Tel. Number
- Battery Meter
- Other Information

- **Connection**

- Incoming Call

- **In-Call Setup**

- In-Call Timer
- Answer Options

- **Security**

- Phone Lock
- Lock Keypad
- Lock Application
- Restrict Calls
- New Passwords

- **Other Settings**

- Personalize

- Main Menu
- Keys
- Greeting
- Banner
- Quick Dial

- Initial Setup

- Time and Date
- Auto PIN Dial
- Auto Redial
- Backlight
- Zoom
- Scroll
- Animation
- Language
- Contrast Setting
- DTMF
- Master Reset
- Master Clear

- Network

- Car Settings
- Headset



# Contents

---

<b>Menu Map</b> .....	3
<b>About This Guide</b> .....	8
<b>Safety and General Information</b> .....	10
<b>Getting Started</b> .....	17
What's in the Box? .....	17
Installing the Battery .....	17
Charging the Battery .....	18
Turning Your Phone On .....	19
Sending a Call .....	20
Ending a Call .....	20
Receiving a Call .....	21
Displaying Your Phone Number .....	21
<b>About Your Phone</b> .....	22
Display .....	22
Changing the Zoom Setting .....	24
Volume Keys .....	25
Battery Use .....	25
<b>Sending and Receiving Calls</b> .....	27
Redialing a Number .....	27
Using Automatic Redial .....	27
Caller ID .....	28
Dialing an Emergency Number When the Phone is Locked .....	28
Dialing With Speed Dial .....	28
Dialing With One-Touch Dial .....	29
Additional Dialing Features .....	30
<b>Using Features While On a Call</b> .....	32
Using Call Waiting .....	32
Making a Three-Way Call .....	32



Additional On-Call Features .....	33
<b>Using the Menu</b> .....	34
Navigating to a Feature .....	34
Selecting a Feature Option .....	35
Entering Feature Information .....	36
<b>Entering Text</b> .....	38
Choosing a Text Mode .....	38
Tap Method .....	39
Predictive Text Entry with iTAP™ Software .....	41
<b>Menu Feature Descriptions</b> .....	43
Main Menu Features .....	43
Settings Menu Features .....	47
<b>Phonebook</b> .....	55
Fields in a Phonebook Entry Form .....	55
Storing a Phonebook Entry .....	56
Recording a Voice Name For a Phonebook Entry .....	58
Dialing a Phonebook Entry .....	59
<b>Radio</b> .....	61
Turning the Radio On and Off .....	61
Tuning a Station .....	61
Storing a Preset .....	62
Selecting a Preset .....	62
Sending and Receiving Calls With the Radio On .....	62
<b>Messages—Voicemail</b> .....	64
Storing Your Voicemail Number .....	64
Receiving a New Voicemail Message .....	64
Listening to a Voicemail Message .....	65
<b>Messages—Text</b> .....	66
Setting Up the Text Message Inbox .....	66



# Contents


Receiving a New Text Message . . . . .	67
Reading, Locking, or Deleting a Text Message . . . . .	68
Sending a New Text Message . . . . .	69
Sending a New Text Message to More Than One Person . .	71
Sending a Quick Note Text Message . . . . .	72
Sending a Quick Note to More than One Person . . . . .	73
<b>Voice Notes</b> . . . . .	76
Recording a Voice Note . . . . .	76
Playing a Voice Note . . . . .	77
<b>Micro-Browser</b> . . . . .	78
Starting a Micro-Browser Session . . . . .	78
Interacting With Web Pages . . . . .	79
<b>Adjusting Your Settings</b> . . . . .	80
Ring/Vibrate . . . . .	80
Reordering Menu Items . . . . .	81
Customizing a Soft Key Function . . . . .	82
<b>Security</b> . . . . .	83
Assigning a New Code or Password . . . . .	83
Locking and Unlocking Your Phone . . . . .	83
Locking and Unlocking Your Keypad . . . . .	85
<b>Troubleshooting</b> . . . . .	86
<b>Programming Instructions</b> . . . . .	90
<b>Specific Absorption Rate Data</b> . . . . .	91
<b>FDA Update</b> . . . . .	93
<b>Warranty</b> . . . . .	102
<b>Export Law Assurances</b> . . . . .	110
<b>Index</b> . . . . .	111
<b>Wireless Phone Safety Tips</b> . . . . .	119



# About This Guide

---

## Using Your Phone's Features

This user guide introduces you to the many features in your Motorola  phone. A reference guide for your phone is also available that explains the phone's features in more detail. To obtain a copy of the reference guide or another copy of this user guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals>

or contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.


## Navigating To a Menu Feature

You can access many of your phone's features through the menu system. This guide shows you how to navigate to a specific menu feature as follows:

### Find the Feature



> Recent Calls  
> Dialed Calls

The > symbol means that you should scroll to and select the feature. This example shows that you must press , scroll to and select **Recent Calls**, then scroll to and select **Dialed Calls** to view the dialed calls list.



 
# About This Guide

## Optional Features



Features marked with this label are optional network and/or subscription-dependent features. These features may not be offered by all service providers in all geographical areas. Contact your service provider for information about availability.

## Optional Accessories



Features marked with this label require the use of an optional Motorola Original™ accessory.

# ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

## ***RF Operational Characteristics***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 849 MHz in analog and digital mode and 1851.25 MHz to 1908.75 MHz in digital mode.

When you communicate with your phone, the system handling your call controls the power levels at which your phone transmits. The output power level typically may vary over a range from 0.05 watts to 0.44 watts in analog mode and 0.0 watts to 0.24 watts in digital mode.

## ***Exposure To Radio Frequency Energy***

Your Motorola phone is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):

- United States Federal Communications Commission, Code of Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992





- Institute of Electrical and Electronic Engineers (IEEE)  
C95.1-1999 Edition
- National Council on Radiation Protection and  
Measurements (NCRP) of the United States, Report 86,  
1986
- International Commission on Non-Ionizing Radiation  
Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human  
Exposure to Radiofrequency Electromagnetic Fields in the  
Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority  
Radiocommunications (Electromagnetic Radiation-Human  
Exposure) Standard 1999

To assure optimal phone performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:

## ***Portable Phone Operation and EME Exposure***

### ***Antenna Care***

**Use only the supplied or an approved replacement antenna.** Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.



# ***Safety and General Information***

**Do NOT hold the antenna when the phone is in use.**

Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

## ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone. **Speak directly into the microphone.**

## ***Body-Worn Operation***

To maintain compliance with FCC RF exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a **Motorola-supplied or approved clip, holder, holster, case, or body harness for this product.** Use of non-Motorola-approved accessories may exceed FCC RF exposure guidelines. **If you do not use a body-worn accessory, and are not holding the phone in the normal use position at the ear, ensure the phone and its antenna are at least one inch (2.5 centimeters) from your body when transmitting.**

## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, **position the phone and its antenna at least one inch (2.5 centimeters) from your body.**

## ***Approved Accessories***

For a list of approved Motorola accessories, visit our website at [www.motorola.com](http://www.motorola.com).



## ***Electromagnetic Interference/ Compatibility***

**Note:** Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

### ***Facilities***

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

### ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

### ***Medical Devices***

#### **Pacemakers**

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, the United States Food and Drug Administration.



# ***Safety and General Information***

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

## **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

## **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## ***Safety and General***

### ***Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- give full attention to driving and to the road.





- use hands-free operation, if available.
- pull off the road and park before making or answering a call if driving conditions so require.

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a portable phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless the phone is a model specifically identified as being "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.



## ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

## ***Operational Cautions***

### ***Antennas***

**Do not use any portable phone that has a damaged antenna.** If a damaged antenna comes into contact with your skin, a minor burn can result.

### ***Batteries***

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

ITC01-045





# Getting Started

---

## What's in the Box?

Your digital wireless phone typically comes equipped with a battery and a charger. Other accessory options can customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, please contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

## Installing the Battery

Before you can use your phone, you need to install and charge the battery.



Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

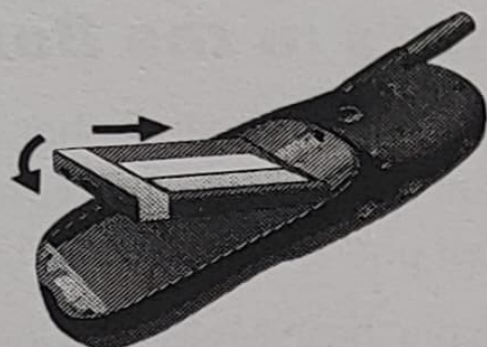
### Do This

- 1 Remove the battery from its protective clear plastic case.
- 2 If the phone's battery door is already in place, lightly slide down the battery door release latch and lift the battery door off of the phone.



## Do This

- 3 Insert the battery, printed arrows first, into the battery compartment and push down.



- 4 Replace the battery door.

## Charging the Battery

Before you can use your phone, you need to install and charge the battery.

## Do This

- 1 Plug the travel charger into your phone with the release tab facing up.



 
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates that the battery is fully charged, press the release tab and remove the travel charger.





## Turning Your Phone On

### Do This


- 1 Press and hold   
(the power key)

### To

turn on your phone

Power  
key



- 2 Enter your four-digit unlock  
code and press **OK** 

unlock your phone, if  
necessary

The unlock code is  
originally set to 1234.

## Sending a Call

To call a number, your phone must be turned on, be unlocked, and have a network connection with adequate signal strength.

Do This	To
1 Extend the antenna.	optimize signal reception <b>Tip:</b> Your phone uses a two-stage antenna that must be fully extended for proper operation. You may have to pull on the antenna a second time to extend the antenna to its maximum length.
2 Press the keypad keys	dial the phone number (up to 32 digits) <b>Tip:</b> If you make a mistake, press <b>DELETE</b> (⌫) to delete the last digit, or press and hold <b>DELETE</b> (⌫) to clear all digits.
3 Press <b>SEND</b> (send key)	send the call

## Ending a Call

Press	To
<b>END</b> (end key)	end the call

 





## Receiving a Call


 
To receive a call, your phone must be turned on and have a network connection with adequate signal strength. If your phone is locked, you must unlock the phone to answer the call.

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
 or <b>ANSWER</b> 	answer the call

## Displaying Your Phone Number

From the idle display:

Press	To
 	see your phone number



 
# About Your Phone

---

See page 1 for a diagram of your phone that describes basic phone components.

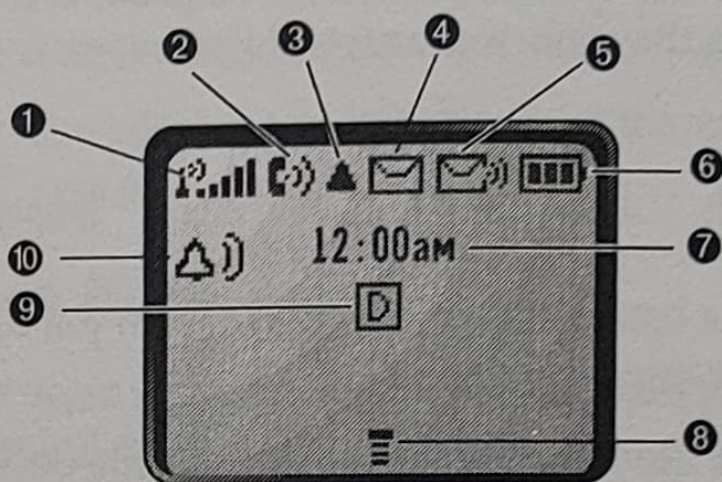
## Display

The top section of the display shows phone status indicators. The following illustration shows some of the common indicators that you may see at the top of the display when using your phone.

Messages, phone numbers, and menu options appear in the middle of the display. Text labels at the bottom corners of the display show the current soft key functions. A  (menu) indicator in the bottom center of the display indicates that you can open the main menu or a feature sub-menu to see more options. For more information about the soft key and menu key labels, see "Using the Menu" on page 34.

Some of the phone functions described in this guide must be performed from the idle display. The term *idle display* refers to the standard display that you see when your phone is on and ready to use, when you are *not* on a call or using the menu system.





**1 Signal Strength Indicator** Shows the strength of your phone's connection with the network.

Strong



No signal

You cannot send or receive calls when the "no signal" indicator is displayed.

**2 In Use Indicator** Appears when a call is in progress.

**3 Roam Indicator** Appears when your phone uses another network system outside your home network. When you leave your home network area, your phone *roams* or seeks another network.



**4 Message Waiting Indicator** Appears when your phone receives a text message.


 




**5 Voice Message Waiting Indicator** Appears when you receive a voicemail message.



# About Your Phone

 
**⑥ Battery Level Indicator** Shows the amount of charge left in your battery. The more segments visible, the greater the charge.

 
 
High     Empty

Recharge your battery as soon as possible when you see the **Low Battery** warning message.

 


 
**⑦ Clock** Shows the current time. The clock is available only when your phone is operating in digital mode.

 
**⑧ Menu Indicator** Indicates that you can press  to open a menu. See "Using the Menu" on page 34.

 
**⑨ Digital () or Analog () Signal Indicator** Shows whether you are receiving a digital or analog signal.

 
**⑩ Alert Setting Indicator** Shows the current selected alert. The default alert setting is a ringer.

 Loud ring

 Soft ring

 Vibrate

 Ring and vibrate

 Silent

## Changing the Zoom Setting

You can set your phone's display to show either three lines or two lines of text plus soft key labels. Three lines of text display more information, while two lines increase text size.





To change the display view, press **MENU** once, then press and hold **MENU** again within two seconds of the first press.

You can also adjust the zoom setting from the menu. See the "Zoom" item on page 52.

## Volume Keys

Use the upper and lower volume keys to adjust your phone's earpiece and ringer volume. The volume keys are located on the left side of the phone.

When	Press	To
During a call	volume keys	increase or decrease earpiece speaker volume
From the idle display	volume keys	increase or decrease ringer volume

You can also use the volume keys to scroll up or down through menus and lists.

To change keypad volume, see "Select a Ring/Vibration for a Specific Event" on page 81.

## Battery Use

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola approved batteries and battery chargers. The phone warranty does not cover damage



## About Your Phone

caused from using non-Motorola batteries and/or battery chargers.

- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.
- The more you talk on the phone or use phone features (like sending text messages), the less standby time your battery has.



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.



# ***Sending and Receiving Calls***

 
 
---



For basic instructions on how to send a call, end a call, and receive a call, see page 20 of the "Getting Started" section.

## ***Redialing a Number***

 

If you hear an ordinary busy signal, the phone number you dialed is busy.

Press	To
1 	hang up
2 	redial the busy number

## ***Using Automatic Redial***

If the network is busy, you hear a fast busy signal, and your phone displays the message **Call Failed**.

With automatic redial, your phone repeats the call attempt over the next four minutes.

Press	To
 or <b>RETRY</b> (  )	activate automatic redial

When the call goes through, your phone rings or vibrates once, displays **Redial Successful**, and then connects the call automatically.

You must activate automatic redial in order to use the feature. See the "Auto Redial" item on page 52.



## **Caller ID**




The *calling line identification* (caller ID) feature lets you see who is calling before you answer.

- If the caller's name is stored in your phonebook, the phone automatically displays the name. Otherwise, the phone displays the caller's phone number.
- If caller ID information is not available, your phone displays the message **Incoming Call**.

## ***Dialing an Emergency Number When the Phone is Locked***

Your service provider may program one or more emergency phone numbers that you can call even if your phone is locked or restricted.

When you see **Enter Unlock Code** in the display:

<b>Press</b>	<b>To</b>
<b>1</b> keypad keys	dial the emergency number (such as 911)
<b>2</b> 	call the emergency number

## ***Dialing With Speed Dial***

The *speed dial* feature lets you dial any phonebook entry with a minimal number of keypresses.





Whenever you store an entry in your phonebook, the entry is assigned a unique speed dial number. If you know the speed dial number for the phonebook entry you want to call, you can use the speed dial feature.

<b>Press</b>	<b>To</b>
1    keypad keys	enter the one-, two-, or three-digit speed dial number for the entry you want to dial
2	submit the number
3	call the entry

To make an entry in the phonebook or view an existing entry's speed dial number, see "Storing a Phonebook Entry" on page 56.

 
## ***Dialing With One-Touch Dial***

 
You can call phonebook entries 2 through 9 with the push of a single key. Just press and hold the one-digit speed dial number for one second.

It is recommended that you reserve location 1 in the phonebook for storing your voicemail number. In many cases, your service provider has already stored your voicemail number in location 1.



# ***Sending and Receiving Calls***

If your voicemail number is not accessible by pressing and holding the  key, complete the following steps:



<b>Do This</b>	<b>To</b>
<b>1</b> Store your voicemail number in phonebook location number 1 (see "Storing a Phonebook Entry" on page 56)	enable the  key voicemail shortcut
<b>2</b> Complete the instructions for "Storing Your Voicemail Number" on page 64	enable voicemail soft key and menu shortcuts

To store entries in locations 2 through 9 in the phonebook, see "Storing a Phonebook Entry" on page 56.

## ***Additional Dialing Features***

In addition to pressing numbers on your keypad, you can insert numbers or characters and send calls in a variety of ways.

While dialing (with digits visible in the display):

<b>Do This</b>	<b>To</b>
Press  > <b>Attach Number</b>	attach a number from the phonebook or recent calls list to the end of the digits you entered
Press  > <b>Send Message</b>	create a text message addressed to the number entered





Do This	To
<p>Press <b>MENU</b> and then scroll to and select one of the following:</p> <ul style="list-style-type: none"><li>• <b>Insert Pause</b> (to insert a p)</li><li>• <b>Insert Wait</b> (to insert a w)</li><li>• <b>Insert 'n'</b> (to insert an n)</li></ul>	<p>insert a special character when making a calling card call:</p> <ul style="list-style-type: none"><li>• <b>Pause</b> tells your phone to wait until the call connects before it sends the next digit.</li><li>• <b>Wait</b> tells your phone to wait until the call connects, and then to prompt you before it sends the next digit.</li><li>• <b>'n'</b> tells your phone to stop and to prompt you for a number before it sends the next digit.</li></ul>

You can also call numbers using these features:

Do This	To Call
<p>Press and release the voice key on the right side of your phone and say the entry's name (in two seconds).</p>	<p>a phone number using the voice dial feature</p> <p>See "Recording a Voice Name For a Phonebook Entry" on page 58.</p>
<p>Press <b>MENU</b> &gt; <b>Recent Calls</b> &gt; <b>Received Calls</b> or <b>Dialed Calls</b> &gt; <i>entry to call</i></p>	<p>a missed call or a number from a call you recently dialed or received</p>



# Using Features While On a Call

---

## Using Call Waiting



If you subscribe to call waiting, an alert tone sounds while you are on a call to indicate that you have received a second call.

To put the first call on hold and answer the second call:

Press	To
1	answer the new call
2	switch back to the first call

To end the first call and answer the second call:

Press	To
1	end the current call Your phone rings to signal the new call.
2	answer the new call

## Making a Three-Way Call



During a call, you can call and connect a third party so that the three of you can talk together. You cannot do this if you already have a call on hold.





During a call:

Press	To
1 keypad keys	enter the third person's number
2 <b>SND</b>	call the number and connect the new person
3 <b>SND</b>	connect the two calls
4 <b>END</b>	end the entire call

## Additional On-Call Features

While you are on a call, you can perform the following tasks:

Do This	To
Press <b>MUTE</b> (📞)	mute a call
Press <b>MENU</b> > <b>My Tel. Number</b>	see your phone number
Press <b>MENU</b> > <b>Send Tones</b>	send a number to the network as DTMF tones, for credit card calling or password entry  To activate DTMF tones, see the "DTMF" item on page 53.



# Using the Menu

## Navigating to a Feature

You can access many of your phone's features by using these keys to move through the menu system:

 
### Left Soft Key

Perform the function shown in the lower left corner of the display (usually **EXIT** or **BACK**).

### Volume Keys

Move up or down through menus and lists.

### Menu Key

Enter the menu system, or open a sub-menu, when  appears in the bottom center of the display.

### End Key

 
 
Exit the menu system without making changes, return to the idle display.

### Right Soft Key

Perform the function shown in the lower right corner of the display (usually **SELECT** the highlighted menu item).

### Scroll Keys

Move up or down through menus and lists.

 and 

Cycle through and set the value of the highlighted menu item.







This guide shows you how to navigate to a specific menu feature as follows:

## Find the Feature

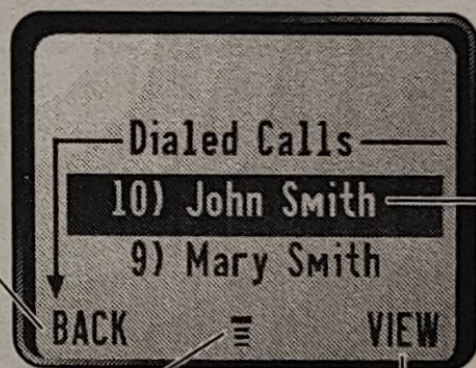
**MENU** > Recent Calls  
> Dialed Calls

The > symbol means that you should scroll to and select the feature. This example shows that you must press **MENU**, scroll to and select **Recent Calls**, then scroll to and select **Dialed Calls** to see the dialed calls list.

## Selecting a Feature Option

Some features require you to select an item from a list:

Press **BACK** (◀) to go back to the previous screen.



Highlighted item

A sub-menu is available. Press **MENU** to open the sub-menu.

Press **VIEW** (⦿) to view details of the highlighted item. **STORE** (⦿) appears if you can store the item in your phonebook.

Select an item by highlighting it. Use one of the following approaches:

- Press ⬆ ⬇ to scroll up or down to the item you want.
- In a numbered list, press a number key to highlight the item.




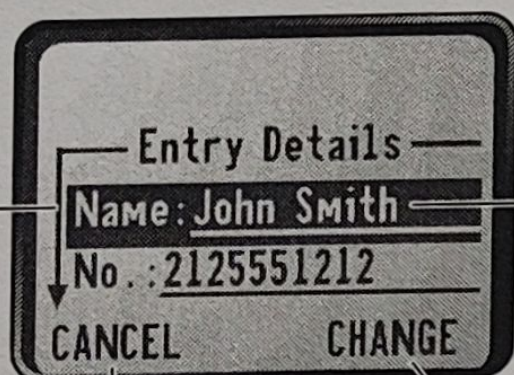
# Using the Menu

- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.

 
 
 
## Entering Feature Information

 
Features such as the phonebook require you to enter information to fill in an entry's details:

 
 
 
Press  to scroll down to additional items.



Highlighted item

Press **CANCEL** () to exit without making changes. **DONE** () appears when you enter or edit information. Press **DONE** () to save your changes.

Press **CHANGE** () to edit the selected information.

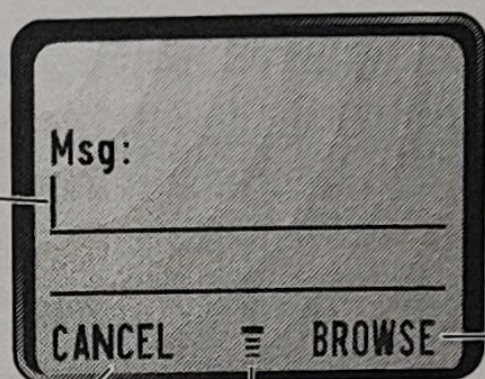
- Enter numbers or text with the keypad. (See "Entering Text" on page 38.)
- When an item has a list of possible values, press  or  to scroll through and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.
- If you enter or edit information and then decide that you do not want to save your changes, press **END** () to exit without saving.





The message center lets you compose and send text messages. (See "Entering Text" on page 38.) A *flashing cursor* shows you where the text will appear:

*Flashing cursor* indicates insertion point.



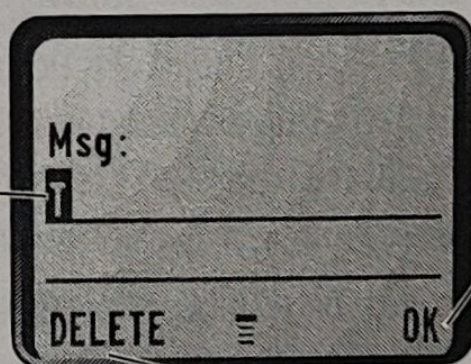
Press **CANCEL** (⓪) to exit without making changes.

Press **MENU** (⓪) to open the sub-menu.

Press **BROWSE** (⓪) to view and insert a name, number, or message from previously stored information.

When you enter text, the flashing cursor changes to a *block cursor*, and the soft key functions change:

*Block cursor* indicates current highlighted character.



Press **OK** (⓪) to accept and store the text.

After two seconds, the block cursor reverts to a flashing cursor and moves to the next position.

Press **DELETE** (⓪) to delete the character to the left of the insertion point.



# Entering Text


---

Various text entry methods make it easy for you to enter names, numbers, email addresses, and text messages on your phone.

You can enter all characters (letters, numbers, and symbols) using the standard tap method. Other text modes let you easily enter numbers or insert text already stored on your phone.

Finally, a predictive text mode lets you enter text messages with a minimum of keypresses.

## Choosing a Text Mode

To activate a text mode, press  from any text entry screen and select the text mode from the **Entry Method** menu:

**iTAP** Let the phone predict each word as you enter it, then choose the word from a list (see "Predictive Text Entry with iTAP™ Software" on page 40).

**Tap Method** Enter characters one at a time by pressing the key for the letter, number, or symbol (see "Tap Method" on page 39). **This is the standard mode for entering text on your phone.**

**Numeric** Enter only the number that appears on each key.

**Browse** Browse through your phonebook and recent calls lists to select a name or number to enter.

**Note:** The text mode you select remains active until you change it by selecting another mode.



## Tap Method

Tap method is the default standard mode for entering text on your phone.

To enter text using the tap method:

Do This	To
1 Press a number key one or more times	cycle through the characters associated with the key and select the character you want (see the "Character Chart" on page 40).
2 Continue to press number keys	enter the rest of the characters in the text message
3 Press <b>OK</b> (⓪)	accept and store the text when you are finished


 
 
 


## General Text Entry Rules

Use the keypad to enter letters, numbers, symbols, and other characters with the tap method. Press the same key repeatedly to cycle through available characters (see the "Character Chart" on page 40):

- To enter text at a flashing cursor, press a number key.
- To enter the desired character, press the number key as many times as necessary. For example, press **2<sup>ABC</sup>** three times to enter the "c" character.
- To cycle between uppercase and lowercase characters, press and hold a key.

 
 


# Entering Text

- To move the flashing cursor up or down one line in a text message, or to change a character in block cursor to uppercase or lowercase, press  or .
- To move the flashing cursor to the left or right in a text message, press  or .
- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- The first character of every sentence is capitalized unless you manually change it. (Hold the number key or press  or  down to force the character to lowercase while it is highlighted by the block cursor.)

## Character Chart


Use this chart as a guide for entering spaces, numbers, letters, symbols, and other characters with the tap method. Press and hold a key to cycle between uppercase and lowercase characters.

	space . 1 ? ! , @ _ & : ; " - ( ) ' ç ì % £ \$ ¥
	+ - 0 x * / \ [ ] = > < # §

## Predictive Text Entry with iTAP™ Software

 
 
 
iTAP™ software provides a predictive text entry method that lets you enter the letters of a word using only one keypress per letter.



You must activate iTAP software prior to entering letters. You can do this from any text entry screen by pressing  and selecting the iTAP menu option.

## Enter Words

 
 
 
 
 
To enter a word:

Do This	To
1 Press a number key one time	enter the first letter of the word The letters associated with the key you pressed are shown at the bottom of the display.
2 Press number keys (one per letter)	enter the rest of the word Alternative words and letter combinations are shown at the bottom of the display based on the keys you press. These word choices are updated with each keypress.
3 When you have entered all the letters of the word, press  or 	locate and highlight the word you want
4 Press SELECT (  )	add the highlighted word to the text area at the top of the display A space is automatically inserted after the word.



## Enter Novel Words

You may enter a word that is not in the iTAP software dictionary. If you enter all the letters of a word but the word is not displayed:

Do This	To
1 Press <b>DELETE</b> (  ) one or more times	delete one or more letters until you see a letter combination that matches the start of the word
2 Press  or 	highlight the letter or letter combination
3 Press <b>SELECT</b> (  ) , then press 	shift the text entry cursor to the left and "lock" the selected portion of the word
4 Continue entering letters and highlighting letter combinations	spell the word





# ***Menu Feature Descriptions***

---

This chapter describes all of your phone's features in order of the menu map shown on page 3. Some descriptions also include page numbers where you can find more detailed information. If you would like to learn more about a specific feature, a reference guide for your phone is also available. To obtain a copy of the reference guide or another copy of this user guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals>

or contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

## ***Main Menu Features***

### **RECENT CALLS**

View the numbers of your recent dialed calls and received calls. Press **(SND)** to go directly to the dialed calls list from the idle display.

#### ***Received Calls***

**(MENU)** > Recent Calls  
> Received Calls

View a list of recently received calls.

Your phone keeps a list of the numbers from calls you recently received, even if you did not answer. You can scroll through the list until you find an entry you want to call, store, or delete.



# Menu Feature Descriptions

## Dialed Calls

**MENU** > Recent Calls  
> Dialed Calls

View a list of recently dialed calls. Your phone keeps a list of recently dialed phone numbers, even if the calls did not connect. A ✓ means the call connected. You can scroll through the list until you find an entry you want to call, store, or delete.

## Notepad

**MENU** > Recent Calls  
> Notepad

Stores the last phone number entered on the keypad. The number may be the last number you called or a number you entered during a phone call.

You can call the number on the notepad or you can store it as part of a phonebook entry.

## Call Times

**MENU** > Recent Calls  
> Call Times

View call timers, which record *network connection time*, the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing **END**.

 
**The amount of network connection time you track on your timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.**

 
You can scroll through a list of five timers: Last Call, Dialed Calls, Received Calls, All Calls, and Lifetime.





## PHONEBOOK

 > Phonebook

 > Phonebook Menu

Create and manage a personalized phonebook. You can call phone numbers stored in the phonebook or, for entries with email addresses, you can send a text message directly from your phone.

Create a phonebook entry	Enter a name, phone number or email address, and type indicator, such as home or work. The phone will assign a speed dial number. See page 56.
--------------------------	--

Set up voice dial	Record a voice name you can use to dial a phone number by saying the person's name. See page 58.
-------------------	--

Edit a phonebook entry	View and then update details of a phonebook entry.
------------------------	--

Dial a phonebook entry	Use the phonebook list, voice dial, speed dial, or one-touch dial to call a number or send a text message to an email address. See pages 28 and 60.
------------------------	---

 
Delete a phonebook entry	Use the <b>Phonebook Menu</b> to remove outdated entries.
--------------------------	---

Check phonebook capacity	See how many of the phonebook's entries have been used (up to 400).
--------------------------	---

Sort phonebook entries	Accept the standard sort by speed dial number or sort entries by name or voice dial.
------------------------	--



## QUICK DIAL

 
 > Quick Dial

Dial pre-programmed customer service numbers. Your service provider may program one or more quick dial numbers, such as the customer service number, into your phone. You can call them by selecting them from the quick dial list.

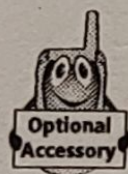
**Note:** Your service provider may use a different name for this feature.



 
## RADIO

 > Radio

Listen to FM radio stations. This menu feature is displayed only when the optional Motorola Original™ FM Stereo Radio headset is plugged into the accessory connector port on your phone. See "Radio" on page 61.



## MESSAGES

 > Messages

Adjust message settings, view and manage the various types of messages your phone can receive and/or send:



### Voicemail

Store and call the voicemail number provided by your service provider. See "Messages—Voicemail" on page 64.

### Text Msgs

Send and receive text messages. See "Messages—Text" on page 66.

### Browser Alerts

Read alert messages received by your micro-browser.

### Quick Notes

 
Select and send pre-written messages from the quick notes list.





 
<b>Outbox</b>	View all outgoing text messages, delivered and undelivered.
<b>Drafts</b>	Store and edit text messages that you have written but not sent.

## SHORTCUTS

 > Shortcuts

 
Create keypad or voice shortcuts to menu features.

## VOICE NOTES

 > Voice Notes

Use the voice key to record and playback messages and phone calls. See "Voice Notes" on page 76.

## BROWSER

 > Browser

Access Web pages and run Web-based applications.

 


The micro-browser delivers WAP (Wireless Application Protocol) pages from your service provider directly to your phone. See "Micro-Browser" on page 78.

## Settings Menu Features

### RING/VIBRATE


#### Alert

 > Settings  
> Ring/Vibrate  
> Alert

Select a type of ring or vibration alert for incoming calls and messages. See "Ring/Vibrate" on page 80.




## **Alert Detail**

-  > Settings
- > Ring/Vibrate
- > Alert Detail

Change details about the ring or vibration alert. *Alert* represents the name of the current alert setting. See "Ring/Vibrate" on page 80.


## **PHONE STATUS**

### **My Tel. Number**

-  > Settings
- > Phone Status
- > My Tel. Number


View, enter, and edit your name and phone number.

### **Battery Meter**

-  > Settings
- > Phone Status
- > Battery Meter

View a detailed battery charge meter.

### **Other Information**

-  > Settings
- > Phone Status
- > Other Information

View the phone's feature specifications (if available from the service provider).

## **CONNECTION**

Connect your phone to a computer or hand-held device to send and receive data and fax calls on the connected device. Connect your phone using a serial cable or USB cable. See:

<http://www.motorola.com/>







## **Incoming Call**

- MENU** > Settings
- > Connection
- > Incoming Call

Specify the format for the next incoming call. You can select Fax In Only, Data In Only, or Normal.

## **IN-CALL SETUP**

Use the in-call setup menu to set the features that are active during a call, such as the in-call timer and call answering options.

## **In-Call Timer**

- MENU** > Settings
- > In-Call Setup
- > In-Call Timer

Adjust call timer display and beep settings. You can set your timer to beep at a selected interval during your calls. (60 seconds is the default.) You can also turn on or off a display timer during calls as follows:

- |             |  |
|-------------|--|
| <b>Time</b> | Display the elapsed time for the current call. |
| <b>Off</b>  | Hide the in-call timer.                        |

## **Answer Options**

- MENU** > Settings
- > In-Call Setup
- > Answer Options

Turn call answering options on or off:

- |                  |                             |
|------------------|-----------------------------|
| <b>Multi-Key</b> | Answer by pressing any key. |
|------------------|-----------------------------|




# Menu Feature Descriptions

## SECURITY


Lets you change the four-digit unlock code and a six-digit security code that will prevent other users from accessing your personal information or modifying your phone settings.

### **Phone Lock**

 > Settings > Security  
> Phone Lock


Lock and unlock your phone. See "Locking and Unlocking Your Phone" on page 83.

### **Lock Keypad**

 > Settings > Security  
> Lock Keypad


Lock and unlock your keypad to prevent accidental keypresses that might inadvertently dial an emergency number or one-touch dial number.

### **Lock Application**

 > Settings > Security  
> Lock Application

Lock and unlock specific phone applications (such as phonebook) so that users must enter the unlock code before they can use the applications.

### **Restrict Calls**

 > Settings > Security  
> Restrict Calls

Restrict all incoming and outgoing calls or restrict them to the numbers stored in your phonebook. An incoming call that is restricted is treated as an unanswered call. Your phone displays the **Missed Calls** message and adds the call to the received list.

You can still place calls to emergency numbers when outgoing calls are restricted. Your phone still receives incoming text messages when incoming calls are restricted.





## **New Passwords**

**MENU** > Settings > Security  
> New Passwords

Change your unlock code (originally set to 1234) or your security code (originally set to 000000). See "Assigning a New Code or Password" on page 83.

## **OTHER SETTINGS**

Use the other settings menu to view or adjust personal options, the initial setup of your phone, the way your phone connects to your service provider's network, and the setup of optional equipment needed for hands-free use.

## **Personalize**

**MENU** > Settings  
> Other Settings  
> Personalize

Set several personal phone options:

### **Main Menu**

Change the order of the main menu. See "Reordering Menu Items" on page 81.

### **Keys**

Change the functions of the soft keys in the idle display. See "Customizing a Soft Key Function" on page 82.

### **Greeting**

Change the text displayed when you turn on your phone.

### **Banner**

Change the text that appears in the idle display.

### **Quick Dial**

Change quick dial number(s).



# Menu Feature Descriptions

## Initial Setup



- > Settings
- > Other Settings
- > Initial Setup

Set many basic phone options:

### Time and Date

Set the phone's time and date.

### Auto PIN Dial

Some networks require an authenticating PIN to allow outgoing calls. Use this feature to automatically dial your PIN.



### Auto Redial

Automatically redial calls that fail due to busy network conditions.

### Backlight

Set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power.

### Zoom

Switch between three lines (**Zoom Out**) and two lines (**Zoom In**) of display text.

### Scroll

Force the cursor to stop or wrap around when it reaches the top or bottom of a list in the display.

### Animation

Turn animation off (to conserve the battery) or on. Animation makes your phone's menus move smoothly as you scroll up and down.

### Language

Set the language for phone menus.





## Contrast Setting

Adjust the contrast setting for your display.

## DTMF

Switch DTMF tones to be long, short, or off.

## Master Reset


Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer.

## Master Clear

Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer, *and* clear all user settings and entries.

**Note:** This option *erases all user-entered information* stored in your phone's memory, including phonebook entries. Once you erase the information, it cannot be recovered.

## Network

 > Settings  
> Other Settings  
> Network

View and adjust your phone's network settings.

Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, and turn on/off alerts that indicate when a call is dropped or network registration changes.

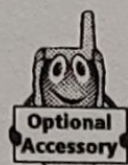


# Menu Feature Descriptions

## Car Settings



- > Settings
- > Other Settings
- > Car Settings



Adjust hands-free settings for an optional Motorola Original™ car kit you have purchased.

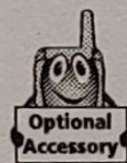
**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

- |                        |  |
|------------------------|--|
| <b>Auto Answer</b>     | Set the car kit to automatically answer calls after two rings.   |
| <b>Auto Handsfree</b>  | Set your phone to detect and automatically route calls to the car kit.   |
| <b>Power-Off Delay</b> | Specify the amount of time the car kit delivers power to the phone after you switch off the ignition.                |
| <b>Charger Time</b>    | Specify the amount of time the car kit uses your car battery to charge your phone after you switch off the ignition. |

## Headset



- > Settings
- > Other Settings
- > Headset



Set your phone to automatically answer calls after two rings when connected to a headset.





# Phonebook

You can store a list of names and phone numbers or email addresses in your phone's electronic phonebook. Your phone can store up to 400 entries. You can view these entries and call them directly from your phone. For email addresses, you can send a text message directly from your phone.

To see the list of names stored in your phonebook, press **MENU** > **Phonebook** from the idle display. Scroll to a name and press **VIEW** (⦿) to view details of the phonebook entry as shown in the following display.

 

 
 
 
 
 
## Fields in a Phonebook Entry Form

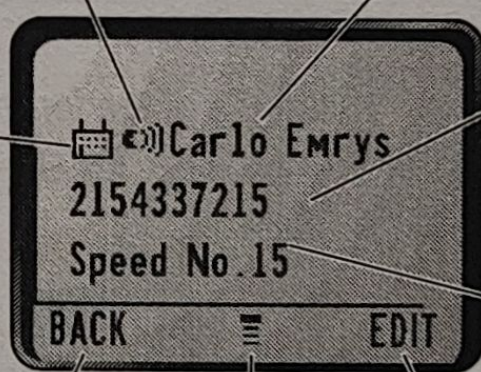
**Voice Name** indicator

indicates a recorded voice name

Entry's Name

**Type** indicator  
identifies  
number type:

-  Work
-  Home
-  Main
-  Mobile
-  Fax
-  Pager
-  Email



Entry's phone  
number or  
email address

Entry's speed  
dial number

Return  
to list

Press **MENU**  
to open the  
**Phonebook**  
**Menu**

Edit  
entry



## Storing a Phonebook Entry

 
A phone number is required for a phonebook entry. All other information is optional.

**Shortcut:** Enter a phone number in the idle display, then press **STORE** (⓪) to create a phonebook entry with the number in the **No.** field. Use the following procedure to enter additional information and store the entry.

### Enter Information

 

 
#### Find the Feature

**MENU** > **Phonebook**  
**MENU** > **New**

Press	To
1 	scroll to <b>Phone Number</b> or <b>Email Address</b>
2 <b>SELECT</b> (⓪)	select the type of entry
3 <b>CHANGE</b> (⓪)	select <b>Name</b>
4 keypad keys	enter a name for the phonebook entry (see "Entering Text" on page 38)
5 <b>OK</b> (⓪)	store the name
6 <b>CHANGE</b> (⓪)	select <b>No.</b> or <b>Email</b>
7 keypad keys	enter the phone number or email address
8 <b>OK</b> (⓪)	store the phone number or email address





Press	To
9 CHANGE (⦿)	select <b>Type</b>
	<b>Note:</b> This option is not available for email entries. Your phone automatically applies an  (email) type indicator when you enter an email address.
10 	scroll to the type of phone number
11 SELECT (⦿)	select the number type
12 RECORD (⦿)	record a voice name for the entry, if desired
or	
Go to step 13 if you do not want to record a voice name for the entry	See "Recording a Voice Name For a Phonebook Entry" on page 58.
13 	scroll to <b>Speed No.</b> , the number to <i>speed dial</i> the entry
	The next available speed dial number is assigned to a new phonebook number by default.
14 CHANGE (⦿)	select <b>Speed No.</b> if you want to change it
15 keypad keys	enter a different speed number, if desired



Press	To
16 OK (ⓘ)	save the modified speed number If your chosen speed number is already assigned to another entry, you are asked if you want to replace that entry.
17 SELECT (ⓘ)	select <b>MORE</b> if you want to create another entry with the same <b>Name</b>  <b>Note:</b> You must enter a name and number to use this option.

## ***Complete Phonebook Entry***

When you are finished entering information for a phonebook entry:

Press	To
DONE (ⓘ)	store the entry and return to the phonebook list

## ***Recording a Voice Name For a Phonebook Entry***

You can record a voice name when you create a new phonebook entry, or when you edit a previously stored phonebook entry. This lets you use voice dial to call the number without dialing (see "Voice Dial" on page 60).

Your phone can store a total of 20 voice names.




 
 

 


**Tip:** Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.

## Find the Feature



> Phonebook

Do This	To
1 Press 	scroll to the entry that needs a voice name
2 Press <b>VIEW</b> (  )	display the entry's detailed view
3 Press <b>EDIT</b> (  )	edit the phonebook entry
4 Press 	scroll to <b>Voice Name</b>
5 Press <b>RECORD</b> (  )	begin the recording process The phone displays <b>Press Voice key then say name.</b>
6 Press and release the voice key on the right side of your phone and say the entry's name (in two seconds)	record the voice name The phone displays <b>Press Voice Key then REPEAT name.</b>
7 Press the voice key and repeat the name	confirm the voice name The phone displays <b>Trained: Voice Name.</b>

## Dialing a Phonebook Entry

You can use the phonebook list, voice dial, speed dial, or one-touch dial to call a number (or send a text message to an



email address) stored in your phonebook. To use speed dial, see "Dialing With Speed Dial" on page 28. To use one-touch dial, see "Dialing With One-Touch Dial" on page 29.

 
 
## Phonebook List

To call a number or send email to an entry in the phonebook list:

### Find the Feature



> Phonebook

Press	To
1 	scroll to the entry you want to call
2 	send the call (for a phone number)
	<b>or</b>
	open a new message form with the entry's address in the To field (for email entries)

## Voice Dial

To call a number or send an email using voice dial:

Do This	Result
Press and release the voice key on the right side of your phone and say the entry's name (in two seconds).	Your phone goes to the entry in the phonebook list, repeats the voice name, waits two seconds, then automatically dials the call (for a phone number) or opens a new message form (for an email address).



# Radio



You can use your phone to tune, store presets, and listen to FM radio stations when the optional Motorola Original™ FM Stereo Radio Headset accessory is plugged into the phone's accessory connector port.

## Turning the Radio On and Off

Press	To
Radio (⦿)	turn the radio on and off

Alternatively, you can use the following procedure:

Press	To
1 MENU	open the menu
2 ⬆ ⬇	scroll to <b>Radio</b>
3 On (⦿) or Off (⦿)	turn the radio on or off

**Note:** The **Radio** (⦿) soft key option and **Radio** menu feature are displayed only when the FM Stereo Radio Headset is plugged into the accessory connector port.

## Tuning a Station

Do This	To
Press ⬆ ⬇	scroll up or down to the next frequency
or	scroll up or down to the next available stereo station
Press and hold ⬆ ⬇	



## Storing a Preset

To store a station to a preset that you can recall later:

Do This	To
Press and hold a number key (1 to 9)	assign its preset number to the tuned station

## Selecting a Preset

To select a preset radio station:

Press	To
a number key (1 to 9)	tune the station stored at that preset location

## Sending and Receiving Calls With the Radio On

Your phone interrupts the radio signal and rings or vibrates as usual to notify you of an incoming call, message, or other event. When you receive a call:

Do This	To
Press <b>IGNORE</b> (⏏)	ignore the call
Press <b>ANSWER</b> (📞)  or Press the button on the FM Stereo Radio Headset microphone	answer the call  <b>Note:</b> You can use the FM Stereo Radio Headset microphone to converse with the other party during a call.





To end the call and resume the FM broadcast:

Do This	To
Press <b>END</b>	end the call
<b>or</b>	
Press and hold the button on the FM Stereo Radio Headset microphone	

Turn the radio off before dialing outgoing calls from the phone keypad. You do not have to turn off the FM radio feature to dial emergency numbers, or numbers selected from your phonebook or other lists.

**Tip:** To dial a recently called number, press **END** or the button on the FM Stereo Radio Headset microphone to go to the dialed calls list.



# Messages – Voicemail





You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone. Contact your service provider for more details.

## Storing Your Voicemail Number

 
Store your voicemail number in your phone to make it faster and easier to use voicemail. Your voicemail number is provided by your service provider.

### Find the Feature

-  > Messages
-  > VoiceMail Setup

Press	To
1 keypad keys	enter the phone number for your voicemail
2 OK (ⓘ)	store the number

## Receiving a New Voicemail Message

When you receive a voicemail message, your phone displays **New VoiceMail** . (Some networks only indicate when you have messages, whether they are new or not.) If reminders are turned on, your phone sends a reminder every five minutes until you close the new message notification, listen to the message, or turn off your phone.





From the new message notification:

Do This	To
Press <b>CALL</b> (📞)	call your voicemail phone number and listen to the message


---

---

## ***Listening to a Voicemail Message***

To listen to your voicemail messages at any time:

### **Find the Feature**

 > Messages > VoiceMail

Your phone calls the voicemail phone number you stored. If you do not have a voicemail number stored, the phone guides you through storing a number.



# Messages – Text



Text messages are brief messages that you can send and receive (such as **Where are we meeting?**).

Received messages appear on your phone display or in your text message inbox.

You must set up the text message inbox *before* you can send and receive these messages. The total number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored in your phone.

 
 
 
 
**Note:** Your service provider may have already programmed the text message inbox settings for you.

## Setting Up the Text Message Inbox

### Find the Feature

**MENU** > Messages

**MENU** > Text Msg Setup

Press	To
1 	scroll to Srvce Center No.
2 <b>CHANGE</b> (  )	change the Srvce Center No. which is provided by your service provider
3 keypad keys	enter the phone number for the service center that handles your outgoing messages
4 <b>OK</b> (  )	store your service center number
5 <b>CHANGE</b> (  )	change the <b>Expire After</b> period





Press	To
6 keypad keys	enter the expiration period—the number of days your network tries to send unreceived messages
7 OK (ⓘ)	store the expiration period
8 CHANGE (ⓘ)	change the Cleanup setting
9 ⓘ	scroll to the period of time that messages stay in your inbox
10 SELECT (ⓘ)	select the cleanup period If you select <b>Custom</b> , continue. Otherwise, the procedure is complete.
11 ⓘ	change the entry for the number or label
12 ⓘ* and ⓘ#	switch between the number and the label
13 DONE (ⓘ)	store the custom cleanup period after you finish entering all information

## Receiving a New Text Message

**Note:** You must set up the text message inbox before you can receive text messages.

When you receive a new message, your phone displays **New Message** ⓘ and gives an alert. If reminders are turned on, your phone sends a reminder every five minutes until you close the new message notification, read the message, or turn off your phone.



# Messages—Text

When your inbox is full, any new message replaces the oldest unlocked message.

From the new message notification:

Press	To
READ (⦿)	open the message (or your text message inbox if there are multiple messages)

 
 
## Reading, Locking, or Deleting a Text Message

You can open your text message inbox to read, lock, or delete messages at any time.

Messages in the text message inbox are sorted from newest to oldest. The oldest messages are deleted as new ones are added. If you want to save a message, you should lock it to prevent it from being overwritten as new messages are received.

### Find the Feature

**MENU** > Messages > Text Msgs

Press	To
1  	scroll to the message you want (ⓧ = unread and urgent, ✓ = read, 🔒 = read and locked)
2 READ (⦿)	open the message





Press	To
3 SAVE (⓪)	close the message without changes
or	
DELETE (⓪)	delete the message
or	
MENU	open the <b>Text Msg Menu</b> and scroll to other operations, such as <b>Lock/Unlock</b>

## ***Sending a New Text Message***

To create and send a new text message:

### **Find the Feature**

MENU > Messages > Text Msgs  
MENU > Create Message

Press	To
1 CHANGE (⓪)	select To
2 keypad keys	enter the phone number or email address where you want to send the message
	<b>Note:</b> To send the message to multiple recipients, see "Sending a New Text Message to More Than One Person" on page 71.
3 OK (⓪)	store the number or email address
4 CHANGE (⓪)	select Msg
5 keypad keys	enter the text message (see "Entering Text" on page 38)



# Messages—Text

Press	To
6 OK (⦿)	store the text message
	<b>Note:</b> Message length is limited. When 40 or fewer characters remain, a two-digit counter at the top of the display shows how many are left.
7 CHANGE (⦿)	select <b>Priority</b>
8 ⦿ ⦿	scroll to the priority you want
9 SELECT (⦿)	set the priority
10 CHANGE (⦿)	select <b>Call</b>
11 keypad keys	enter the number you want your recipient to call back (the message's <b>From</b> field)
12 OK (⦿)	store the number
13 DONE (⦿)	finish the message
	Your phone displays <b>Send Message Now?</b>
14 YES (⦿)	send the message
or NO (⦿)	cancel the message or save it as a draft





 
 
 
 
 
 

 
 


## ***Sending a New Text Message to More Than One Person***

You can create and send a single text message to multiple recipients. To create the message:

### **Find the Feature**

 > Messages > Text Msgs  
 > Create Message

Press	To
1 CHANGE (  )	select To
2 BROWSE (  )	open the Browse Menu
3  	scroll to Phonebook
4 SELECT (  )	select Phonebook
5  	scroll to a phone number or email address where you want to send the message
6 ADD (  )	add the number or address to the group of message recipients <b>Note:</b> To add more recipients, scroll to and select other phone numbers and/or email addresses from the phonebook list.
7 DONE (  )	close the phonebook list and return to the To field in the text message window



Press	To
8 OK (◉)	store the numbers/addresses and complete the other message fields (for details, see "Sending a New Text Message" on page 69)
or	
Ⓜ	open the <b>To Menu</b> to browse for more phone numbers or email addresses
	<ul style="list-style-type: none"><li>• Press Ⓜ to scroll to <b>Browse</b></li><li>• Press <b>SELECT</b> (◉) to open the <b>Browse Menu</b> and repeat this procedure for the additional numbers/addresses</li></ul>

## ***Sending a Quick Note Text Message***

Quick notes are short, pre-written text messages that you can create, select, edit, and send quickly (for example, **Meet me at ...**).

To send or save a quick note message:

**Find the Feature** Ⓜ > **Messages** > **Quick Notes**

Press	To
1 Ⓜ	scroll to the quick note
2 Ⓜ	open the <b>Quick Note Menu</b> to perform other procedures as described in the following list





The Quick Note Menu includes the following options:

Option	Description
New	Open an editor where you can create a new quick note.  Enter text and press <b>OK</b> (⓪) to save it as a quick note.
Edit	Open an editor where you can edit the selected quick note.  Edit the quick note text and press <b>OK</b> (⓪) to save your changes.
Delete	Delete the selected quick note.
Send	Open a new message, with the selected quick note text in the <b>Msg</b> field.  Complete the other fields in the message (for details, see "Sending a New Text Message" on page 69).  To send the quick note to multiple recipients, see "Sending a Quick Note to More than One Person" on page 73.

## ***Sending a Quick Note to More than One Person***

To send a quick note text message to multiple recipients:

 

 
 
 
 
 

 
 
 
**Find the Feature**



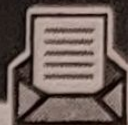
> Messages > Quick Notes



# Messages—Text

Press	To
1 	scroll to the quick note
2 	open the Quick Note Menu.
3 	scroll to Send
4 SELECT (  )	select Send
5 CHANGE (  )	select To
6 BROWSE (  )	open the Browse Menu
7 	scroll to Phonebook
8 SELECT (  )	select Phonebook
9 	scroll to a phone number or email address where you want to send the message
10 ADD (  )	add the number or address to the group of message recipients  To add more recipients, scroll to and select other phone numbers and/or email addresses from the phonebook list.
11 DONE (  )	close the phonebook list and return to the To field in the quick note text message window





**Press**

**To**

12 OK (⓪)

store the numbers/addresses and complete the other message fields (for details, see "Sending a New Text Message" on page 69)

or



open the **To Menu** to browse for more phone numbers or email addresses

- Press ⓪ to scroll to **Browse**
  - Press **SELECT** (⓪) to open the **Browse Menu** and repeat this procedure for the additional numbers/addresses
-



# Voice Notes

---

The voice note feature lets you record personal messages. You can play back a voice note at any time. There are no pre-recorded voice notes on your phone.

## Recording a Voice Note

Your phone can store a total of two minutes of voice note recordings. (That is, the combined recording time of all voice notes cannot exceed two minutes.)

Use this procedure to record a voice note when the idle display is visible, or use it during a phone call to record the call. Your phone plays an alert tone to notify the other party that the call is being recorded.

**Note:** Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

**Tip:** Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.

Do This	Result
1 Press and hold the voice key on the right side of your phone for the duration of the recording.	A tone sounds in the earpiece and the phone displays the <b>Recording Voice Note</b> message.
2 Speak your voice message into the phone.	The phone records the message and displays a recording timer.





Do This	Result
3 Release the voice key to stop recording.	The phone displays the voice notes list number and the total recording time.

## Playing a Voice Note

To play a recorded voice note:

### Find the Feature



> Voice Notes

Press	To
1	scroll to the voice note
2 <b>PLAY</b>	play the voice note

When a Motorola Original™ headset accessory or FM radio headset accessory is attached to your phone, voice note playback is automatically routed to the headset.

**Tip:** You can play a voice note while taking a call. It won't be transmitted to the other party.



# Micro-Browser



The micro-browser lets you access Web pages on your phone. Contact your service provider to set up access, if necessary.


 
## Starting a Micro-Browser Session

To open the micro-browser:

### Find the Feature

**MENU** > Browser

The micro-browser displays the home page set up by your service provider.

Press	To
1 	scroll to a bookmark or service
2 SELECT 	select the service

**Shortcut:** If you open a text message with a Web address (URL) in it, you can go directly to the URL by selecting **MENU** > Go To.

 





 
 
 
 
If you are unable to establish a network connection with the micro-browser, contact your service provider.





## Interacting With Web Pages

You can perform the following operations on a Web page:

Do This	To
Press  	scroll through a text message
Press   and then <b>SELECT</b> (  )	scroll through and select items in a list
Press keypad keys and then <b>OK</b> (  )	enter requested information
Press   to scroll to a phone number on a Web page, then press 	call the number from the micro-browser
Press 	go back to the previous Web page



 
# Adjusting Your Settings

 
---

 
You can adjust a wide variety of phone settings to suit your needs.

 
## Ring/Vibrate

 
Your phone rings or vibrates to notify you of an incoming call, message, or other event. This ring or vibration is called an *alert*. You can use a standard alert for all events, or set different alert types for different events. The alert setting indicator in your display shows the current standard alert setting:

 Loud ring

 Soft ring

 
 Vibrate

 
 
 Ring and vibrate

 Silent

## Select a Ring/Vibration for All Events

### Find the Feature

 > Settings > Ring/Vibrate  
> Alert

Press	To
1 	scroll to the alert you want to use
2 SELECT 	select the alert
	The phone displays the Changed: Alert message.







 

 
## Select a Ring/Vibration for a Specific Event

You can select the alert that your phone uses for a specific event (such as an incoming call) from 32 different preset tones and vibrations. When you select a ring or vibration alert for a *specific* event, it overrides the default alert set for *all* events.

**Tip:** This feature also lets you set the ringer volume and keypad volume.

### Find the Feature

 > Settings > Ring/Vibrate  
> Alert Detail

Press	To
1 	scroll to the event for which you want to set a new alert
2 CHANGE (  )	select the event  The phone displays the list of available alerts.
3 	scroll to the alert you want for the event
4 SELECT (  )	select the alert  The phone displays the Changed: <i>Event Alert</i> message.


## Reordering Menu Items

 
 
 
 
You can customize the order of the items in your phone's main menu, depending upon your usage.




 
# Adjusting Your Settings

## Find the Feature


 > Settings  
> Other Settings  
> Personalize > Main Menu

 
 
 
 
Press	To
1 	scroll to the menu item you want to move
2 GRAB (  )	grab the menu item you want to move
3 	move the item up or down the menu
4 INSERT (  )	insert the item in the new location

## Customizing a Soft Key Function

You can relabel the soft keys ( and ) to access different main menu items from the idle display.

## Find the Feature

 > Settings  
> Other Settings  
> Personalize > Keys

Press	To
1 	scroll to Left or Right
2 CHANGE (  )	open the key editor
3 	scroll to the new key function
4 CHANGE (  )	confirm the new function
The key will have the new function whenever the phone is idle.	





## ***Assigning a New Code or Password***

Your phone's four-digit unlock code is originally set to 1234, and the six-digit security code is originally set to 000000 at the factory. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information or modifying your phone settings. The unlock code must contain four digits, and the security code must contain six digits. Be sure to make a note of the new numbers.

## ***Locking and Unlocking Your Phone***

You can lock your phone manually or set your phone to lock automatically whenever you turn it off.


When you try to use a locked phone, it asks you to enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*

 
You can make emergency calls on your phone even when it is locked. See "Dialing an Emergency Number When the Phone is Locked" on page 28.



## Lock Your Phone Manually

### Find the Feature


 > Settings > Security  
> Phone Lock > Lock Now

 
Press	To
1 keypad keys	enter your four-digit unlock code
2 OK (  )	lock the phone

## Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

 
### Find the Feature

 > Settings > Security  
> Phone Lock  
> Automatic Lock > On

Press	To
1 keypad keys	enter your four-digit unlock code
2 OK (  )	set the phone to lock automatically

## Unlock Your Phone

At the Enter Unlock Code prompt:


 
Press	To
1 keypad keys	enter your four-digit unlock code The unlock code is originally set to 1234.
2 OK (  )	unlock your phone





## ***Locking and Unlocking Your Keypad***

You can lock your phone keypad to prevent accidental use. This feature is useful in situations where an accidental keypress might inadvertently dial an emergency number or one-touch dial number (for example, when carrying your phone in a purse or pocket).


 
 
 
 
 
Press	To
 	lock or unlock your keypad

**Note:** Incoming calls and messages unlock the keypad.



# Troubleshooting

Check these questions first if you have problems with your phone:

 
Question	Answer
<b>Is your phone set up correctly?</b>	Press   . If you do not see your phone number, contact your service provider.
<b>Is your battery charged? Do you see  in the display?</b>	The battery level indicator should have at least one segment showing (  ). If it does not, recharge your battery. (See "Charging the Battery" on page 18 and "Battery Use" on page 25.)
<b>Does the handset have a signal? Do you see  in the display?</b>	Make sure that your antenna is fully extended (if applicable). The signal strength indicator should have at least one segment showing (  ). If it does not, move to an area with a stronger signal to use your phone.
<b>Is the earpiece volume too low or does the phone not ring?</b>	Press the upper volume key on the side of the phone.






Question	Answer
<b>Has the phone been damaged, dropped, or gotten wet?</b>	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
<b>Was a non-Motorola battery or battery charger used?</b>	

The following refer to specific problems:

Problem	Solution
<b>I pressed the power key, but nothing happened.</b>	Be sure to press and hold  the power key until the display appears and you hear an audible alert (this could take a couple of seconds). If nothing happens, check that a charged battery is installed. (See "Installing the Battery" on page 17.)
<b>The display says: Enter Unlock Code. How do I unlock my phone?</b>	Enter the factory-preset unlock code (1234), or the last four digits of your phone number. (See "Locking and Unlocking Your Phone" on page 83.) If this fails, call your service provider (the company that sends you your monthly wireless service bill).



# Troubleshooting

Problem	Solution
I cannot send/receive calls.	<p>Make sure that your antenna is fully extended (if applicable) and that you have a phone signal (see the "Signal Strength Indicator" item on page 23). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.</p> <p>Your phone also may have the <b>Restrict Calls feature</b> turned on. If you know the unlock code, you can change this setting in the security menu ( &gt; <b>Settings</b> &gt; <b>Security</b>).</p>
I cannot open my inbox.	<p>Before you can use text or information services messages, you must set up the appropriate inbox. See "Setting Up the Text Message Inbox" on page 66.</p>
My phone's display is too dark.	<p>You can use the <b>Contrast Setting</b> feature (see page 53) to change the level of contrast in your phone display.</p> <p>You can also use the <b>Backlight</b> feature (see page 52) to change the length of time that your phone's backlight display stays on.</p>





Problem	Solution
<b>I am unable to record a voice note or voice name.</b>	Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) away from your mouth, and speak directly into your phone's microphone in a normal tone of voice.
<b>I launched the micro-browser but the display says: Service Not Available.</b>	You may be in an area without service. If you have wireless service, look in the display for the digital signal indicator (D). If you do not see the indicator, you may be in an area that has only analog service or no service at all. If you see the digital signal indicator, you may be connected to a digital network that does not support Internet access.
<b>I launched the micro-browser but the display says: Data Server Unavailable.</b>	Try again in a few minutes. The servers may be temporarily busy.



 
 
 
 
 
 


 






# Programming Instructions

Follow this procedure if you need to program your phone's phone number or system ID.

**Note:** Programming is normally done by a trained technician at the site of purchase. Users should not make changes other than ones in the following procedure.

Before programming, ask your service provider for your:

- 10-digit MIN (Mobile Identification Number)
- 8- to 15-digit IMSI (International Mobile Service Identifier)
- 8- to 15-digit MDN (Mobile Directory Number)
- 5-digit AMPS SysID number
- 5-digit CDMA SysID number

Do This	To
<b>1</b> Press         (These keys spell P-H-O-N-E +    ).	open the user activation menu
<b>2</b> Press <b>SELECT</b> (  )	select <b>NAM1</b>
<b>3</b> Press the keypad keys for the 10-digit MIN	open the MIN display and enter the new MIN
<b>4</b> Press <b>OK</b> (  )	store the new MIN
<b>5</b> Similarly, enter appropriate numbers for the IMSI, MDN, AMPS SysID, and CDMA SysID	
<b>6</b> Press <b>DONE</b> (  )	close the NAM1 list
<b>7</b> Press <b>BACK</b> (  )	close the user activation menu



# ***Specific Absorption Rate Data***

---

## **This model phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions reviewed by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.



Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is  $1.55 \text{ W/kg}^2$ , and when worn on the body, as described in this user guide, is  $1.41 \text{ W/kg}^2$ . (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of:

<http://www.fcc.gov/oet/fccid>

after searching on FCC ID IHDT56AL1.

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information provided to the FCC includes the FCC-accepted Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.



***The U.S. Food and Drug  
Administration's Center for Devices  
and Radiological Health Consumer  
Update on Mobile Phones***

---



FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

**Why the concern?**

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.



## **What kinds of phones are in question?**

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called "cordless phones," which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

## **How much evidence is there that hand-held mobile phones might be harmful?**

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones.



First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

- 1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the



National Cancer Institute is expected to bear on the accuracy and repeatability of these results.<sup>1</sup>

- 2 Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.<sup>2</sup>

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- 1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they



performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.<sup>3</sup>

- 2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.<sup>4</sup>

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

### **What is known about cases of human cancer that have been reported in users of hand-held mobile phones?**

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people



each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

### **What is FDA's role concerning the safety of mobile phones?**

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone



industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function
- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

### **In the absence of conclusive information about any possible risk, what can concerned individuals do?**

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key



factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

### **Where can I find additional information?**

For additional information, see the following Web sites:



**Federal Communications Commission (FCC)** RF Safety Program (select "Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters"):  
<http://www.fcc.gov/oet/rfsafety>

**World Health Organization (WHO)** International Commission on Non-Ionizing Radiation Protection (select Qs & As):  
<http://www.who.int/emf>

**United Kingdom, National Radiological Protection Board:** <http://www.nrpb.org.uk>

**Cellular Telecommunications Industry Association (CTIA):**  
<http://www.wow-com.com>

**U.S. Food and Drug Administration (FDA)** Center for Devices and Radiological Health: <http://www.fda.gov/cdrh/consumer/>

1. Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
2. Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.
4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. *Int. J. Oncol.*, 15: 113-116, 1999.



# **Warranty**

---

## **Limited Warranty for Motorola Personal Communications Products Purchased in the United States and Canada**

### **I. What This Warranty Covers**

- Products. Defects in materials and workmanship in wireless cellular telephones, pagers, and/or two-way radios, and certain accessories that are sold with them, such as the battery, battery charger and holster manufactured and/or sold by Motorola (Products).
- Batteries. Defects in materials and workmanship in batteries that are manufactured by Motorola and/or sold with Products are covered by this warranty only if the fully-charged capacity falls below 80% of rated capacity or they leak.
- Software. Physical defects in the media that tangibly embodies each copy of any software supplied with the Products.



# Warranty

## II. What the Period of Coverage Is

From the date the Products are purchased by the first end-user:

- Products. The warranty is for one year. Exception: The warranty for Spirit GT series and Talkabout series two-way radio accessories is for 90 days.
- Software. The warranty is for 90 days.
- Repairs/Replacements. The warranty is for the balance of the original warranty or for 90 days from the date you receive it, whichever is longer.

## III. Who is Covered

This warranty extends to the first end-user purchaser, only.

## IV. What We Will Do to Correct Warranty Problems

At no charge to you, we have the option to repair or replace the Products or software that do not conform to the warranty, or to refund the Products' purchase price. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products or parts. No software updates are provided.

## V. How to Get Warranty Service

Please call:

USA

**Cellular**

1-800-331-6456

**Paging**

1-800-548-9954

**Two-Way**

1-800-353-2729

**TTY (Text Telephone)**

1-888-390-6456



# Warranty

## Canada

### **All Products**

1-800-461-4575

### **TTY (Text Telephone)**

1-888-390-6456

You will receive instructions on how to ship the Products to Motorola. You must ship the Products to us with freight, duties and insurance prepaid. Along with the Products you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider (if this Product requires subscription service); (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. If requested, you must also return all detachable parts such as antennas, batteries and chargers. **RETAIN YOUR ORIGINAL PROOF OF PURCHASE.**

We will ship repaired or replacement Products at our expense for the freight and insurance, but at your expense for any duties. If additional information is needed, please contact us at the telephone number listed above.

## **VI. What This Warranty Does Not Cover**

- Products that are operated in combination with ancillary or peripheral equipment or software not furnished by Motorola for use with the Products ("ancillary equipment"), or any damage to the Products or ancillary equipment as a result of such use. Among other things, "ancillary equipment" includes batteries, chargers, adaptors, and power supplies not manufactured or supplied by Motorola. Any of these voids the warranty.



# Warranty

- Someone other than Motorola (or its authorized service centers) tests, adjusts, installs, maintains, alters, modifies or services the Products in any way. Any of these voids the warranty.
- Rechargeable batteries that: (a) are charged by other than the Motorola-approved battery charger specified for charging such batteries; (b) have any broken seals or show evidence of tampering; (c) are used in equipment other than the Product for which they are specified; or (d) are charged and stored at temperatures greater than 60 degrees centigrade. Any of these voids the warranty.
- Products that have: (a) serial numbers or date tags that have been removed, altered or obliterated; (b) board serial numbers that do not match each other, or board serial numbers that do not match the housing; or (c) nonconforming or non-Motorola housings or parts. Any of these voids the warranty.
- Defects or damage that result from: (a) use of the Products in a manner that is not normal or customary; (b) improper operation or misuse; (c) accident or neglect such as dropping the Products onto hard surfaces; (d) contact with water, rain, extreme humidity or heavy perspiration; (e) contact with sand, dirt or the like; or (f) contact with extreme heat, or spills of food or liquid.
- Physical damage to the surface of the Products, including scratches, cracks or other damage to a display screen, lens or other externally exposed parts.



# Warranty

- Failure of Products that is due primarily to any communication service or signal you may subscribe to or use with the Products.
- Coil cords that are stretched or that have any broken modular tabs.
- Products that are leased.

Flat-rate repair rates may apply to Products not covered by this warranty. To obtain information about Products needing repairs that are not covered by this warranty, please call the telephone number previously listed. We will provide information on repair availability, rates, methods of payment, where to send the Products, etc.

## VII. Some Other Limitations

**This is Motorola's complete warranty for the Products, and states your exclusive remedies. This warranty is given in lieu of all other express warranties. Implied warranties, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are given only if specifically required by applicable law. Otherwise, they are specifically excluded.**

**No warranty is made as to coverage, availability, or grade of service provided by the Products, whether through a service provider or otherwise.**

**No warranty is made that the software will meet your requirements or will work in combination with any hardware or applications software products provided**



# Warranty

by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

In no event shall Motorola be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the Product, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, or other financial loss arising out of or in connection with the ability or inability to use the Products, to the full extent these damages may be disclaimed by law.

## VIII. Patent and Software Provisions

At Motorola's expense, we will defend you, and pay costs and damages that may be finally awarded against you, to the extent that a lawsuit is based on a claim that the Products directly infringe a United States patent. Our obligation is conditioned on: (a) you notifying us promptly in writing when you receive notice of the claim; (b) you giving us sole control of the defense of the suit and all negotiations for its settlement or compromise; and (c) should the Products become, or in Motorola's opinion be likely to become, the subject of a claim of infringement of a United States patent, you permit us, at our option and expense, either to: procure for you the right to continue using the Products; replace or modify them so that they become non-infringing; or grant you a credit for such Products, as depreciated, and accept their return. The depreciation will be an equal amount per year over the lifetime of the Products, as established by Motorola.



# Warranty

Motorola will have no liability to you with respect to any claim of patent infringement that is based upon the combination of the Products or parts furnished under this limited warranty with ancillary equipment, as defined in VI., above.

## **This is Motorola's entire liability with respect to infringement of patents by the Products.**

Laws in the United States and other countries preserve for Motorola and other third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to reproduce in copies and distribute copies of such software. The software may be copied into, used in and redistributed with only those Products that are associated with such software. No other use, including without limitation, disassembly or reverse engineering of such software or exercise of exclusive rights in such software is permitted.

## **IX. State Law and Other Jurisdiction Rights**

Some states and other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from jurisdiction to jurisdiction.

To obtain information on Motorola Personal Communications Products, including warranty service, accessories and optional Extended Warranties on selected Products, please call:



# Warranty

## USA

<b>Cellular</b>	1-800-331-6456
<b>Paging</b>	1-800-548-9954
<b>Two-Way</b>	1-800-353-2729
<b>TTY (Text Telephone)</b>	1-888-390-6456

## Canada

<b>All Products</b>	1-800-461-4575
<b>TTY (Text Telephone)</b>	1-888-390-6456

To correspond with Motorola about the Products, please write us at <http://www.motorola.com> or at:

In the USA:

Motorola, Inc.

600 North U.S. Highway 45

Libertyville, IL 60048

In Canada:

Motorola Canada Limited

5875 Whittle Road

Mississauga, ON L4Z 2H4



## ***Export Law Assurances***

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.



# ***Index***

---

## **A**

- accessories
  - optional 9, 61
  - standard 17
- accessory connector port 1
- alert
  - defined 80
  - indicators 24, 80
  - setting 80
  - type, selecting 81
- alert setting indicator 24, 80
- animation 52
- antenna 20
- application, locking 50
- Attach Number** feature 30
- auto PIN dial 52
- automatic redial
  - activating 52
  - using 27

## **B**

- backlight 52
- banner text 51
- battery
  - charging for first time 18
  - charging with car kit 54
  - extending battery life
    - 25–26, 52
  - installing 17–18

## **battery (continued)**

- level indicator 24
- meter 48
- block cursor, defined 37
- browse text mode 38
- browser alerts 46
- browser. *See* micro-browser 47

## **C**

- call
  - alert type, selecting 81
  - alert, setting 80
  - answer options 49
  - answering 21
  - attaching phone number to
    - prefix digits 30
  - call waiting 32
  - calling card 31
  - data call, setting 49
  - dialed calls list 31, 44
  - emergency number 28
  - ending 20
  - fax call, setting 49
  - in-call timer 49
  - incoming call type, setting 49
  - muting 33
  - placing 20
  - received calls list 31, 43



- call (continued)
  - receiving 21
  - restricting 50
  - sending 20
  - three-way call 32–33
  - voice dial 31
- call timers 44
- call waiting 32
- caller ID 28
- calling card call 31
- calling line identification. *See* caller ID
- car kit 54
- charging with car kit 54
- clock 24
- contrast 53
- cursor 37
- customer service, calling 46
- customizing the menu 81

## D

- data call
  - connecting to external device 48
  - incoming call format, setting 49
- date, setting 52
- default passwords 83
- dialed calls list 31, 44

- digital/analog signal indicator 24

- display
  - animation 52
  - backlight 52
  - banner text 51
  - contrast 53
  - described 22–24
  - greeting 51
  - idle display 22
  - language 52
  - zoom 24–25, 52
- drafts folder 47
- DTMF tones 33, 53

## E

- earpiece
  - illustration 1
  - volume, adjusting 25
- emergency number 28
- end key
  - functions 1, 20
  - menu functions 34
- ending a call 20
- Enter Unlock Code** message 84
- event alert 81



## F

- fax call
  - connecting to external device 48
  - incoming call format, setting 49

flashing cursor, defined 37

FM radio headset 46, 61

for hands-free use 54

## G

greeting, display 51

## H

hands-free use 54

headset

- FM radio 46, 61

- for hands-free use 54

- jack 1

## I

idle display, defined 22

in use indicator 23

inbox, text message 66

in-call timer 49

**Incoming Call** message 28

incoming call type 49

indicators

- alert setting 24, 80

- battery level 24

- digital/analog signal 24

indicators (continued)

- in use 23

- menu 22

- message waiting 23

- ring alert 24, 80

- roam 23

- signal strength 23

- silent alert 24, 80

- vibrate alert 24, 80

- voice message waiting 23

- voice name 55

iTAP software

- activating 41

- entering words 41–42

## J

jack for hands-free headset 1

## K

key

- end 1, 20, 34

- left soft key 1, 34, 82

- lock 85

- menu 1, 21, 34

- power 1, 19

- right soft key 1, 34, 82

- scroll 1, 34

- send 1, 20, 21

- voice 1, 59, 76–77

- volume control 1, 34



keypad volume 81  
keypad, answering calls with  
49

## L

language 52  
left soft key  
    customizing 82  
    functions 1, 34  
lock  
    applications 50  
    keypad 85  
    phone 83–84  
lock application feature 50  
loud ring alert 24, 80

## M

making a call 20  
master clear 53  
master reset 53  
menu  
    customizing 81–82  
    entering text 38–42  
    features 43–47  
    language, setting 52  
    locking applications 50  
    navigating 8, 34–35  
    **Phonebook Menu** 45, 55  
    **Quick Note Menu** 72–73  
    rearranging features 81–82  
    scroll feature 52

menu (continued)

**Text Msg Menu** 69  
        using features 8, 35–37  
menu indicator 22, 24  
menu key 1, 21, 34  
message  
    deleting 68–69  
    drafts folder 47  
    inbox setup 66–67  
    locking 68–69  
    outbox 47  
    quick note 46, 72–75  
    reading 68–69  
    reminders 64, 67  
    text 46, 66–70  
    voicemail 46, 64–65  
message waiting indicator 23  
micro-browser  
    browser alerts 46  
    call a number from 79  
    defined 47, 78  
    functions 79  
    go to previous page 79  
    starting 78  
microphone 1  
muting a call 33  
my telephone number 33, 48

## N

'n' character 31  
network settings 53



notepad 44

numeric text mode 38

## O

one-touch dialing 29–30

optional accessory, defined 9

optional feature, defined 9

outbox 47

## P

passwords

changing 51, 83

default 83

pause character 31

phone

accessories, optional 9

accessories, standard 17

answer options 49

connecting to external device  
48

date, setting 52

feature specifications 48

keypad, locking and  
unlocking 85

language, setting 52

locking 83–84

muting a call 33

network settings 53

one-touch dialing 29–30

passwords 51, 83

phone (continued)

specifications 48

speed dial, using 28–29

time, setting 52

turning on/off 19

unlocking 19, 83–84

voice dial 31

phone number

attaching to prefix digits 30

redialing 27

viewing your own 21, 33

voice dial 31

phonebook

attaching phone number to  
prefix digits 30

dialing an entry number 59

entry name 55

fields 55

number type indicator 55

one-touch dialing 29–30

phone number 55

speed dial number 28, 55,  
57–58

speed dial, using 28–29

storing an entry 56–58

voice name entry 58–59

voice name indicator 55

**Phonebook Menu** 45, 55

PIN code, dialing automatically  
52



power key 1, 19  
predictive text entry  
    activating 41  
    entering words 41–42

## Q

quick dial  
    setting number 51  
    using 46  
quick note 46, 72–75  
**Quick Note Menu** 72–73

## R

radio 46, 61–63  
received calls list 31, 43  
receiving a call 21  
recent calls  
    attaching phone number to  
        prefix digits 30  
    menu description 43  
redial  
    automatic redial 27  
    busy number 27  
reminders  
    text message 67  
    voicemail message 64  
restricting calls 50  
right soft key  
    customizing 82  
    functions 1, 34

ring alert  
    indicators 24, 80  
    setting 80  
    type, selecting 81  
ringer volume 25, 81  
roam indicator 23

## S

scroll feature 52  
scroll keys 1, 34  
send key 1, 20, 21  
sending a call 20  
short message service. *See* text  
    message  
signal strength indicator 23  
silent alert indicator 24, 80  
SMS. *See* text message  
soft keys  
    customizing 51, 82  
    functions 34  
    illustration 1  
soft ring alert 24, 80  
speed dial  
    changing number 57–58  
    number, defined 28  
    using 28–29  
standby time, increasing 26



## T

- tap method text entry 39–40
- text
  - block cursor 37
  - browse mode 38
  - changing text mode 38
  - character chart 40
  - entering from keypad 38–42
  - flashing cursor 37
  - iTAP software predictive text entry 41–42
  - numeric mode 38
  - tap method 39–40
- text message 46, 66–70
- text mode, changing 38
- Text Msg Menu** 69
- three-way call 32–33
- time, setting 52
- timers 44
- travel charger 18

## U

- unlock
  - keypad 85
  - phone 83–84

## V

- vibrate alert
  - indicator 24, 80
  - setting 80
  - type, selecting 81
- voice dial
  - dialing a number 31, 60
  - recording voice name 58–59
- voice key
  - dialing a number 31
  - functions 1
  - recording a voice name 59
  - recording a voice note 76–77
- voice message waiting indicator 23
- voice name
  - defined 58
  - phonebook indicator 55
  - recording 58–59
- voice note
  - defined 76
  - playing 77
  - recording 76–77
  - total recording time 76
- voicemail 46, 64–65



volume

earpiece 25

keypad 81

ringer 25, 81

volume keys 1, 25, 34

## **W**

wait character 31

warranty 102–109

Web pages

functions 79

viewing 78

## **Z**

zoom setting 24–25, 52





**MOTOROLA**

## ***Wireless Phone Safety Tips***

*"Safety is your most important call!"*

**Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.**

**When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:**

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- 2 When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.





- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- 8 **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.\*





- 9 **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.\*
- 10 **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

\* Wherever wireless phone service is available.



**Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.**

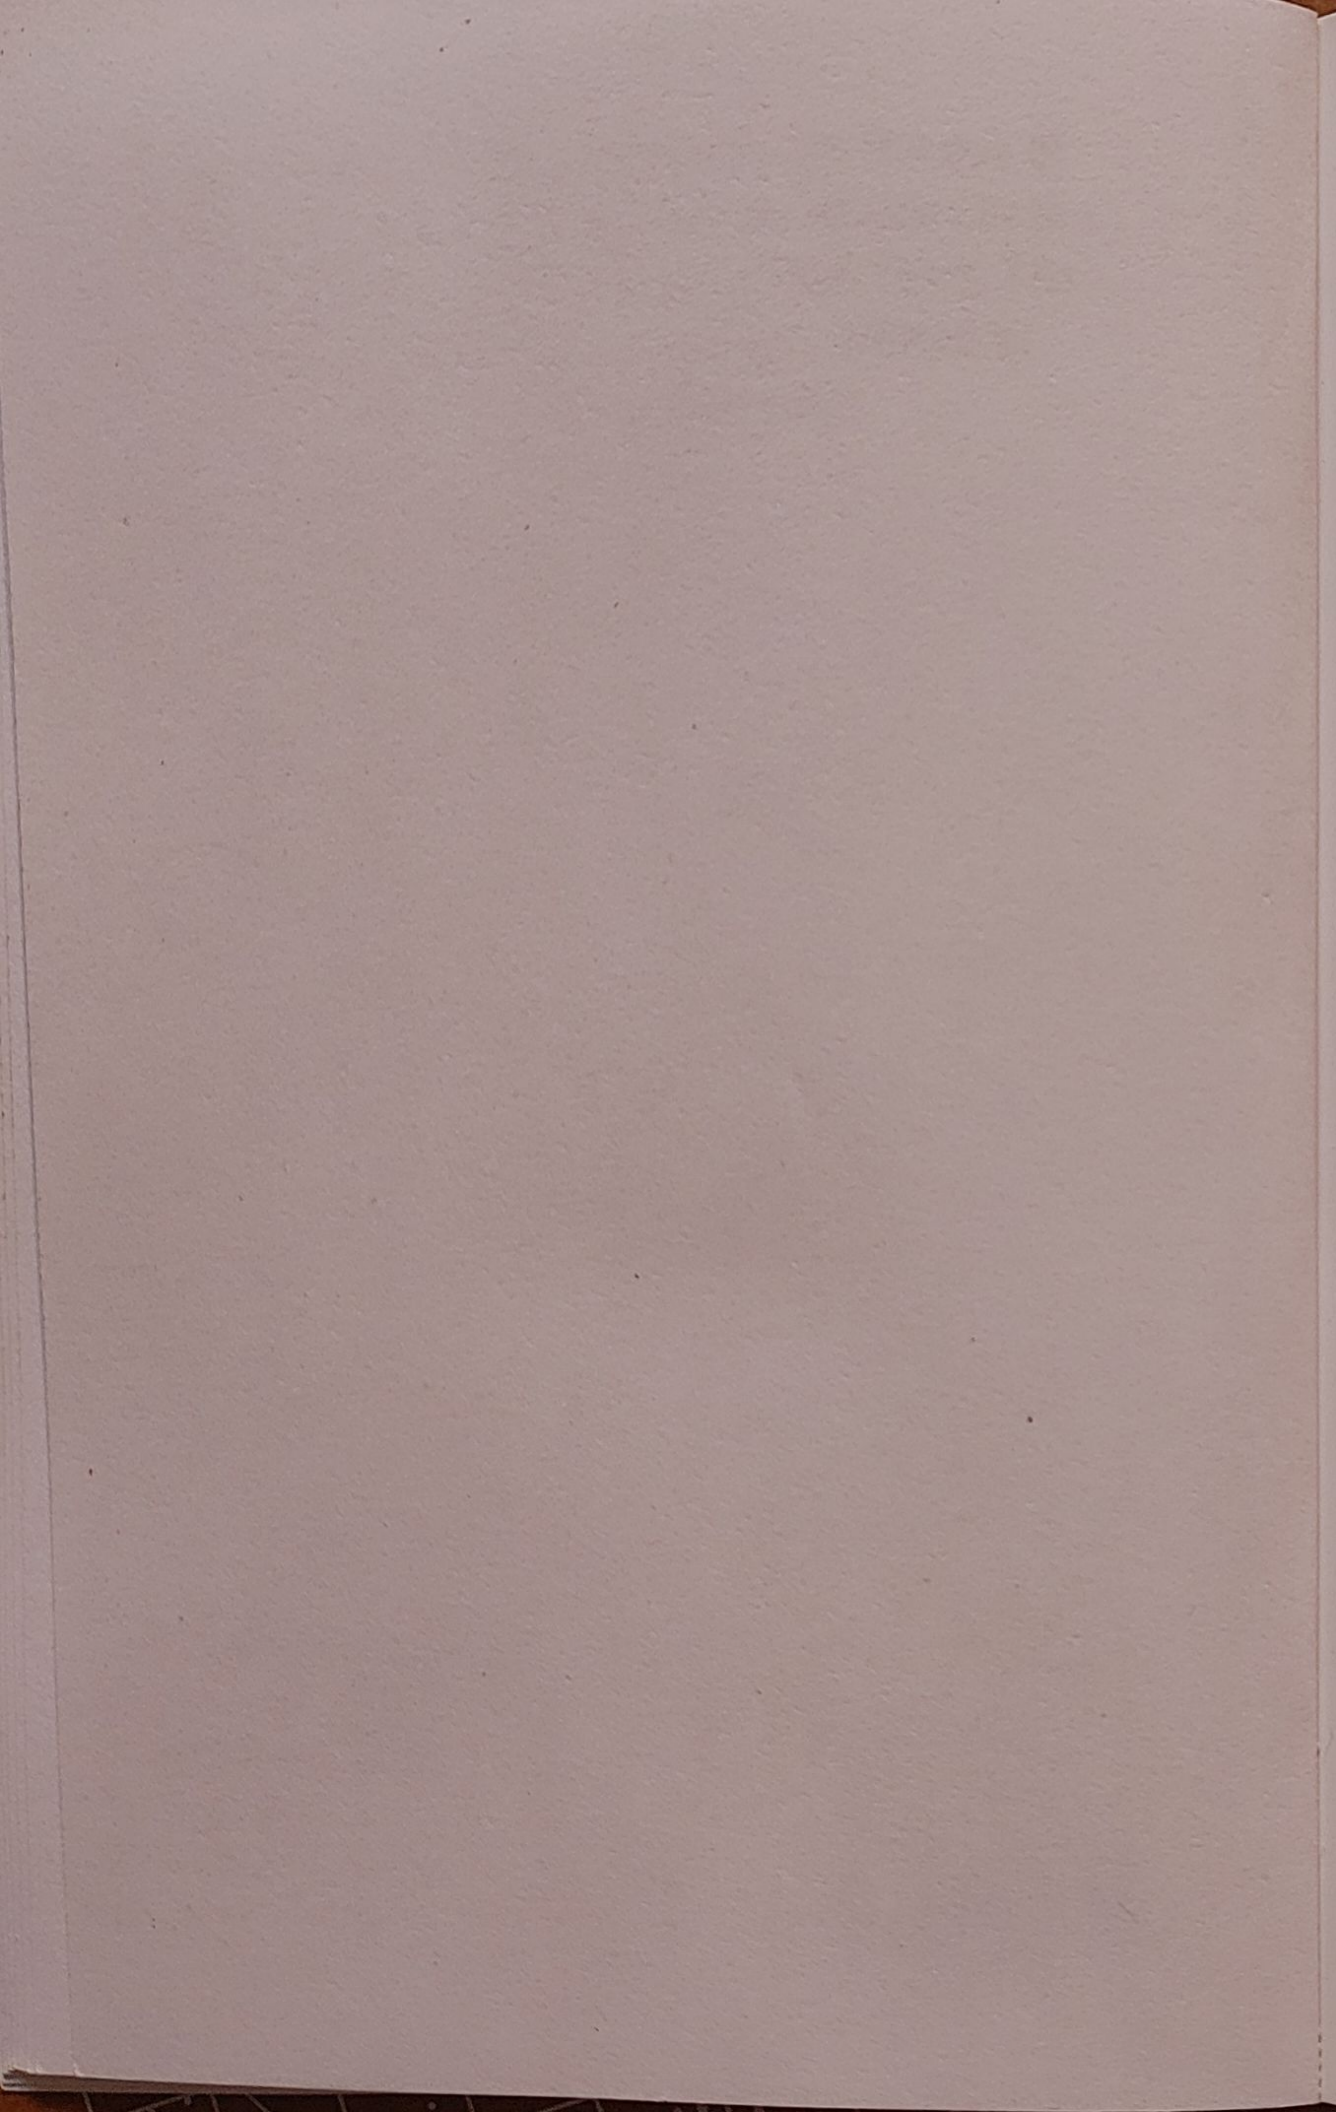
For more information,  
please call  
1-888-901-SAFE  
or visit the  
CTIA Web site at  
[www.wow-com.com](http://www.wow-com.com)<sup>TM</sup>



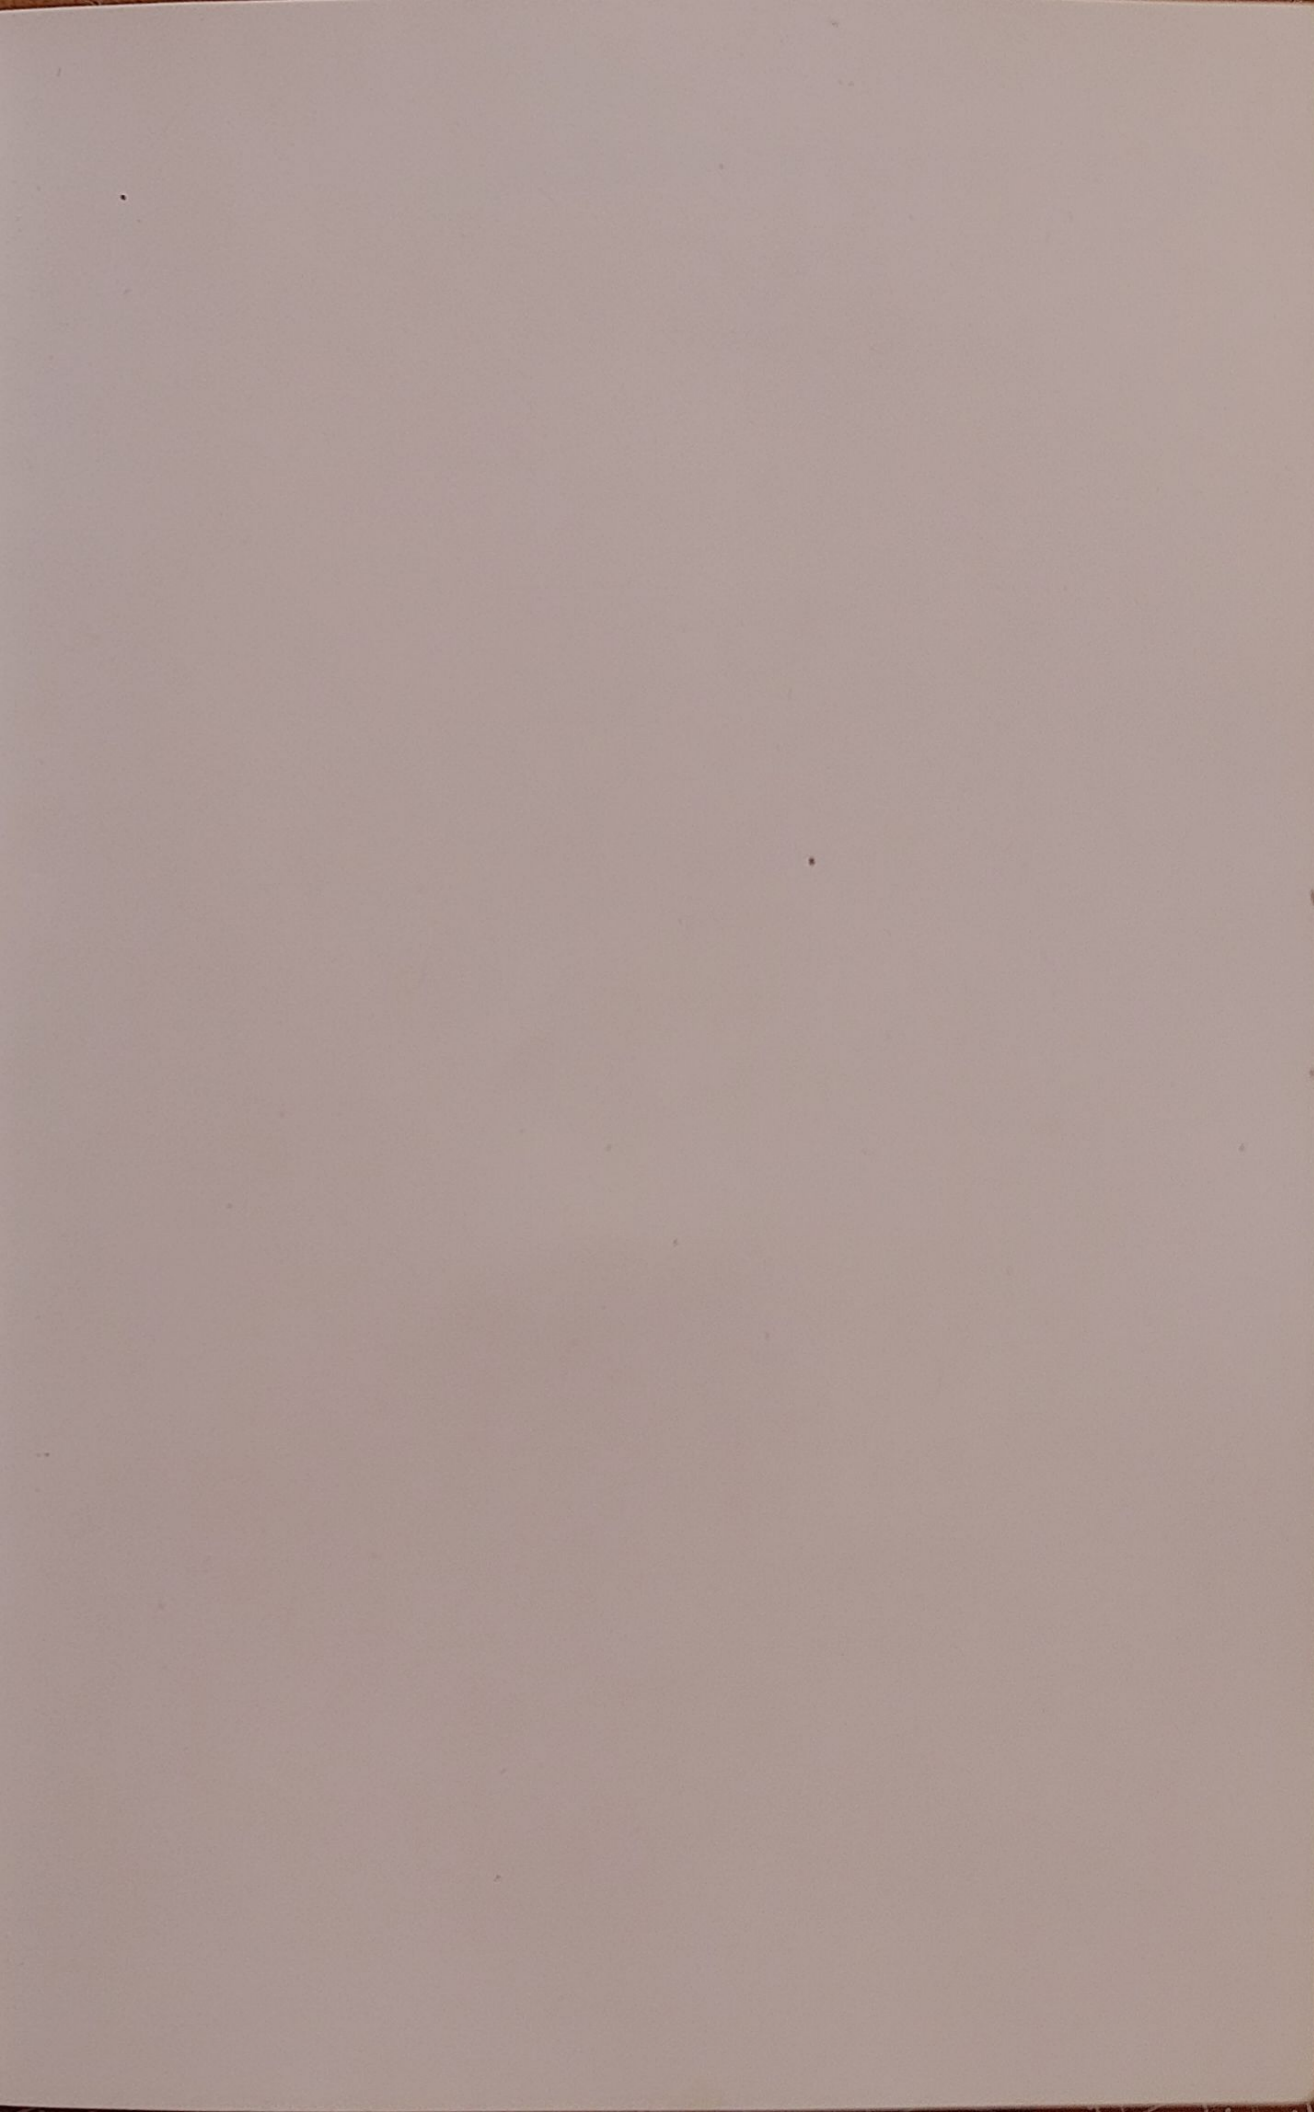
















**MOTOROLA**



DIGITAL WIRELESS TELEPHONE

8988485L07-O